



Instruction Manual

Super Pop Maxx 16 oz. Popper

Export Model Series: 2600



GOLD MEDAL[®] PRODUCTS CO.

10700 Medallion Drive, Cincinnati, Ohio 45241-4807 USA



Table of Contents

SAFETY PRECAUTIONS	3
INSTALLATION INSTRUCTIONS	5
Inspection of Shipment	5
Manual.....	5
Model Description	5
Items Included with this Unit.....	5
Setup	6
Electrical Requirements	7
Before You Plug In Machine.....	7
OPERATING INSTRUCTIONS	8
Controls and Their Functions	8
Popping Corn Instructions	9
Popping Salted (Standard) Popcorn.....	9
Care and Cleaning	10
Daily Kettle Cleaning Instructions	10
Daily Unit Cleaning Instructions.....	11
Filter Cleaning Instructions	12
Troubleshooting	13
AGITATOR SET COLLAR ADJUSTMENT	14
MAINTENANCE INSTRUCTIONS	15
ORDERING SPARE PARTS	16
Replacing Broken Glass.....	17
16 oz. Kettle Assembly (55199EX) – Agitator Assembly View.....	18
16 oz. Kettle Assembly (55199EX) – Kettle Bottom Assembly.....	19
Cabinet Exterior – Front View	21
Cabinet Exterior – Rear View	22
Door Hardware Kit 61380 – Individual Component Breakdown.....	23
Cabinet Interior – Hanger Assembly/Controls View	24
Cabinet Interior – Bottom View	25
Dome Interior – Electrical Components	26
Safety Labels.....	27
Accessories.....	27
Wiring Diagram	28
WARRANTY	29



SAFETY PRECAUTIONS

	⚠ DANGER
	<p>Machine must be properly grounded to prevent electrical shock to personnel. Failure to do so could result in serious injury, or death. DO NOT immerse any part of this equipment in water. DO NOT use excessive water when cleaning. Keep cord and plug off the ground and away from moisture. Always unplug the equipment before cleaning or servicing. Make sure all machine switches are in the OFF position before plugging the equipment into the receptacle.</p> <p>008_051514</p>

	⚠ DANGER
	<p>Improper installation, adjustment, alteration, service, or maintenance can cause property damage, injury, or death. Any alterations to this equipment will void the warranty and may cause a dangerous condition. This appliance is not intended to be operated by means of an external timer or separate remote-control system. NEVER make alterations to this equipment. Read the Installation, Operating, and Maintenance Instructions thoroughly before installing, servicing, or operating this equipment.</p> <p>014_020416</p>



	⚠ WARNING
	<p>To avoid burns, DO NOT touch the kettle or any heated surface. DO NOT place or leave objects in contact with heated surfaces.</p> <p>013_092414</p>



	⚠ WARNING
	<p>ALWAYS wear safety glasses when servicing this equipment.</p> <p>010_010914</p>

	⚠ WARNING
	<p>No user serviceable parts inside. Refer servicing to qualified service personnel.</p> <p>011_051514</p>

	⚠ WARNING
	<p>Read and understand operator's manual and all other safety instructions before using this equipment. To order copies of the operator's manual go to gmpopcorn.com or write to Gold Medal Products Co., 10700 Medallion Drive, Cincinnati, OH 45241 USA 1-(800)-543-0862</p> <p>022_060215</p>



	 WARNING
	DO NOT allow direct contact of this equipment by the public when used in food service locations. Only personnel trained and experienced in the equipment operation may operate this equipment. Carefully read all instructions before operation. 012_010914

	 WARNING
	This machine is NOT to be operated by minors. 007_010914

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Note: Improvements are always being made to Gold Medal's equipment. This information may not be the latest available for your purposes. It is critical that you call Gold Medal's Technical Service Department at 1-800-543-0862 for any questions about your machine operations, replacement parts, or any service questions. (Gold Medal Products Co. does not assume any liability for injury due to careless handling and/or reckless operation of this equipment.) General images may be used in manual for reference only.



INSTALLATION INSTRUCTIONS

Inspection of Shipment

After unpacking, check thoroughly for any damage which may have occurred in transit. Claims should be filed immediately with the transportation company. The warranty does not cover damage that occurs in transit, or damage caused by abuse, or consequential damage due to the operation of this machine, since it is beyond our control (reference warranty in back of manual).

Manual

Read and understand the operator's manual and all other safety instructions before using this equipment. To order copies of the operator's manual go to gmpopcorn.com or write to Gold Medal Products Co., 10700 Medallion Drive, Cincinnati, OH 45241 USA 1-(800)-543-0862.

Model Description

2600EX: Export Super Pop Maxx, 16 oz. popper with Popcorn Graphics, LED cabinet lighting, and a PowerOff Control.

This appliance is intended to be used in household and similar applications such as staff kitchen areas in shops, offices and other working environments; farm houses; by clients in hotels, motels, bed and breakfast or other residential type environments.

Items Included with this Unit



Setup

This unit has been tested at the factory.

1. Remove all packaging and tape prior to operation.
2. Place unit on a sturdy, level base.
3. The Popper blower vents out top of unit, allow adequate clearance for airflow.
4. Unit has 4 glide feet preinstalled at the factory (see image below). Install a Black Crutch Tip on each foot. Firmly push crutch tip over glide until it covers glide entirely.
5. Door knobs are shipped facing the inside of machine. Re-adjust knobs to face the outside of machine.

Knob for Old Maid Pan is shipped in accessories pack located inside machine, install knob with screw on the Old Maid Pan.

6. Apply Popcorn Decal to unit.
7. Make sure kettle lead-in cord is securely plugged into unit, and twisted to lock into the kettle receptacle (see image below).
8. After setup, unit should be cleaned prior to use (see Care and Cleaning section).



Glide (pre-installed
at the factory)

Black
Crutch Tip

Rubber Feet Installation



Make sure kettle lead is
plugged in and twisted to
lock into kettle receptacle.

General images shown for reference only (Models may vary).





Electrical Requirements

The following power supply must be provided (reference unit Data Plate for Wattage requirement):

220-230 V~, 50/60 Hz

Potential Electrical Variations: 220 V~, 60 Hz

	 DANGER
	<p>Machine must be properly grounded to prevent electrical shock to personnel. Failure to do so could result in serious injury, or death. DO NOT immerse any part of this equipment in water. DO NOT use excessive water when cleaning. Keep cord and plug off the ground and away from moisture. Always unplug the equipment before cleaning or servicing. Make sure all machine switches are in the OFF position before plugging the equipment into the receptacle.</p> <p>008_051514</p>

A certified electrician must furnish sufficient power for proper machine operation and install any supplied receptacle. We recommend this equipment be on a dedicated and protected circuit. Failure to wire properly will void the warranty and may result in damage to the machine. It is Gold Medal Products Co.'s recommendation that this machine be plugged directly into a wall outlet. The use of extension cords is not recommended due to safety concerns, and may cause sacrificed and/or reduced performance. Make sure cord is located to prevent a trip hazard or unit upset.

Before You Plug In Machine

1. Make sure all machine switches are OFF before plugging equipment into receptacle.
2. Make sure wall outlet can accept the grounded plugs (where applicable) on the power supply cord.
3. The wall outlet must have the proper polarity. If in doubt, have a competent electrician inspect the outlet and correct if necessary.
4. **DO NOT** use a grounded to un-grounded receptacle adapter (where applicable).
5. Install unit in a level position.

	 CAUTION
	<p>If the supply cord is damaged, it must be replaced by Gold Medal Products Co., its service agent or similarly qualified persons in order to avoid a hazard.</p> <p>039_080614</p>



OPERATING INSTRUCTIONS

Controls and Their Functions

LIGHTS/WARMER SWITCH


Two position, ON/OFF lighted rocker switch - supplies power to the interior cabinet light, and heat element for the corn deck freshener. The green switch light ON indicates there is power to the lights and corn pan heat element.

KETTLE HEAT SWITCH

Two position, ON/OFF lighted rocker switch - supplies power to the heating elements in the popping kettle. The green switch light ON indicates there is power to the kettle heating element.

KETTLE MOTOR SWITCH

Two position, ON/OFF lighted rocker switch - supplies power to the kettle agitator motor and exhaust blower. The Kettle Motor Switch **MUST** be ON at all times when there is popcorn (popped or un-popped) in the kettle. The green switch light ON indicates there is power to the agitator motor and exhaust blower.

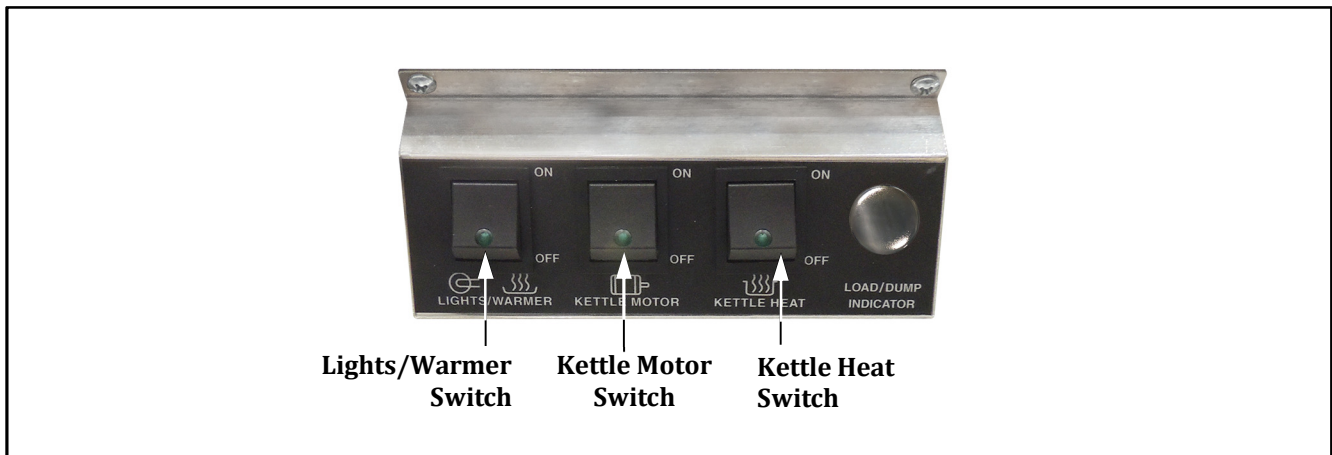



Popping Corn Instructions

This section describes instructions for popping Salted Popcorn.

The popper is equipped with a corn, salt, and oil measure. We recommend flavored and colored coconut oil. Popcorn popped in coconut oil stays fresh longer and does not leave black deposits in the kettle like other oils. Use only top quality, fresh popcorn from reputable suppliers.

Popping Salted (Standard) Popcorn

Raw Popcorn Charge:	Use corn measure provided (ex: for 6 oz. Kettle, use 6 oz. corn)
Recommended Oil Volume:	Oil volume is approx. 30% of corn amount (ex: for 6 oz. corn, use 2 oz. oil)
Flavacol (Salt) Amount:	Use small Flavacol scoop provided

Premeasure all ingredients (adjust as needed for desired taste), or for best results use Mega-Pop® premeasured popcorn and oil pouch made for your kettle size.


1. Turn all switches ON.
2. To determine when kettle is ready to pop corn (about 4 minutes), test pop three kernels of corn in one ounce (30 ml) of popping oil. When kernels pop, kettle is ready.
3. Lift kettle lid, pour in popcorn and Flavacol, then add oil, close lid.
4. When corn has finished popping, gently dump the popcorn.

Popping Tip: On final batch, turn Kettle Heat Switch OFF just as lids are forced open by the popping corn (kettle has plenty of heat to finish popping). This helps eliminate smoke/odor from any oil residue remaining in kettle.

5. When finished popping, turn KETTLE HEAT and KETTLE MOTOR switches OFF.
NEVER LEAVE THE HEAT ON WHEN YOU ARE NOT POPPING CORN!



Care and Cleaning

	⚠ DANGER
	<p>Machine must be properly grounded to prevent electrical shock to personnel. DO NOT immerse in water. DO NOT clean appliance with a water jet. Always unplug the equipment before cleaning or servicing.</p> <p style="text-align: right;">025_111616</p>

	⚠ WARNING
	<p>To avoid serious burns, DO NOT touch the kettle while it is hot!</p> <p style="text-align: right;">028_082715</p>

Good sanitation practice demands that all food preparation equipment be cleaned regularly (only use non-toxic, food grade cleaners). A clean looking, well-kept machine is one of the best ways of advertising your product.

For surfaces needing further cleaning or degreasing, Watchdog Stainless Cleaner (Item No. 2088) or Watchdog Concession Equipment Degreaser (Item No. 2580) is available for use accordingly. For any cleaning products used, follow the manufacturer's instructions on the product. **DO NOT use oven cleaners or abrasive materials** as they will damage parts of machine.

Note: It is extremely important to follow all cleaning procedures, otherwise parts damage and equipment failure will result. The warranty does not cover parts that are damaged due to improper cleaning.

Daily Kettle Cleaning Instructions

1. Turn the power switch OFF and unplug the unit.

CAUTION: A hot kettle will cause burns if you touch it. Allow kettle to cool at least 1 hour before attempting to clean. DO NOT use ice or water to cool down a hot kettle! Severe kettle damage will result and steam burns may occur!

2. When cool, wipe **outside** of kettle clean using a clean, soft cloth and Gold Medal Watchdog Stainless Cleaner (Item No. 2088). **DO NOT** use oven cleaners or abrasive materials as they will damage the kettle.
3. Mix 2 tablespoons (29.6 ml) of Gold Medal's Heat'n Kleen (Item No. 2095) in 1 gallon (3.8 L) of water.
4. Only pour enough of the Heat'n Kleen pre-mixed solution into the kettle to fill it 1/2 inch (12.7 mm) deep (it is not necessary to use the entire gallon at once).
5. Plug in the unit.
6. Turn kettle heat ON. When solution starts to boil, turn kettle heat OFF.
7. Allow kettle to cool at least 1 hour, then unplug unit.



8. Dump solution into a bucket, do not spill any in the interior of machine.
9. Rinse kettle interior with clean water and a clean cloth.
10. Dump any water remaining into a bucket (do not spill any in the interior of machine), then wipe the kettle interior clean with a clean dry cloth.
For an extra dirty kettle, the process may be repeated; or, after turning kettle heat OFF, allow solution to sit in kettle overnight. The next morning, finish the cleaning steps.
11. With unit OFF and unplugged, use a clean SLIGHTLY damp cloth (wring ANY EXCESS water from cloth before use) and wipe the kettle lead cord clean. **DO NOT get moisture into the kettle lead-in cord, severe damage will result.**
12. After kettle cleaning, check to be sure the crossbar fasteners are securely tightened.

Daily Unit Cleaning Instructions

1. Turn machine OFF, unplug unit and allow it to cool before attempting to clean.
2. Remove any remaining popcorn.
3. Remove all pans/accessories and take them to the sink to clean with soap and water, then rinse and dry.
4. Clean under corn pan to remove all popcorn bits and seeds with a vacuum as needed, then wipe the area with a clean dry cloth to remove any grease.
5. Wipe clean the area above the corn pan and exterior surfaces using a clean, SLIGHTLY damp cloth to remove any grease from the glass and cabinet (cloth may be SLIGHTLY dampened with soap and water, then wipe again with clean water to remove any remaining cleaner).
6. Clean glass panels with glass cleaner. Gold Medal Watchdog Glass Cleaner (Item No. 2588) is recommended.
Ammonia cleaners will damage plastic doors/panels. Only use a non-ammonia cleaner, such as Gold Medal Watchdog Glass Cleaner (Item No. 2588).
7. Reinstall the clean, dry pans/accessories.
8. Check the kettle lead cord, make sure it is fully plugged into the kettle receptacle and the plug (or plug collar) is fully twisted to lock it into place.



Filter Cleaning Instructions




The popcorn machine is equipped with an efficient and durable filtration system. The filter should be cleaned every 1-2 weeks to maintain maximum efficiency.

Steps to Clean Filter

Step 1: Turn unit OFF and allow it to cool before removing filter. Filter is located inside the popcorn machine, above the popping kettle.

Step 2: Remove filter by gripping the filter itself and pulling straight down.

Step 3: Clean filter in warm soapy water, then rinse and allow to dry overnight. Replace filter by putting it into the slot and pushing upward. Make sure the filter frame is flush with the ceiling of the popper (as shown above).

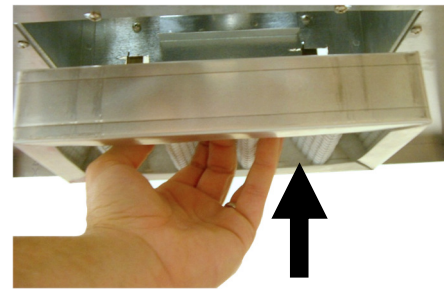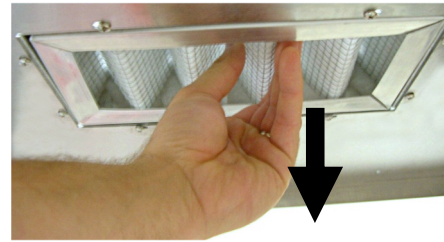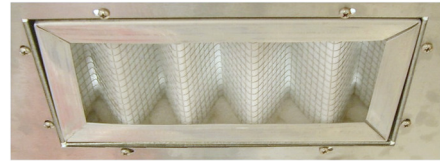



Troubleshooting

Issue	Possible Cause	Solution
No Power to the Unit	A. No Power to the Unit	A. Make sure the unit's power cord is plugged in.
Kettle Does Not Heat	A. Power to the Kettle B. Kettle Heat Switch C. Heating Element	A. Make sure kettle lead-in cord is plugged in and twisted to lock into the kettle receptacle. B. Have a qualified service person check the voltage to and from the Kettle Heat Switch; if switch is defective, replace it. C. Heating element in the kettle may be burned out. Check with a qualified service person for inspection/repair.
Long Popping Cycles (Longer than 4 minutes for Salt Popcorn)	A. Low Voltage B. Inadequate Supply Lines C. Inferior Corn	A. If the machine is operated on low voltage, this could cause the kettle not to reach the proper operating temperature. Check with a qualified electrician. B. Inadequately sized electrical supply lines or use of extension cord, in addition to being a fire hazard, would also prevent the kettle from reaching the proper operating temperature. Check with a qualified electrician. C. Inferior quality corn would result in longer popping cycles. Use only top quality hybrid popcorn from reputable suppliers. Even then, if you let your corn pick up moisture or dry out, your popping cycles will be slow.
Kettle Agitator Shaft not Rotating If the kettle agitator shaft is not rotating, DO NOT pop corn.	A. Kettle Motor Switch B. Kettle Agitator Shaft/Stir Blade not rotating. (Unit must be OFF, unplugged and cool prior to checking or adjusting the agitator assembly.)	A. Make sure the Kettle Motor Switch is ON. If the switch is ON, and the shaft is not rotating, the switch or motor may be faulty, contact qualified service personnel for inspection/repair. B. Kettles with a FIXED Stir Rod – check the clearance between the shaft with welded stir blade and the kettle bottom; it should be a minimum of 1/32" (1 mm) (thickness of a dime). To make shaft adjustments, reference the Agitator Set Collar Adjustment section.



Agitator Set Collar Adjustment

The following instructions describe how to properly adjust set collars on an agitator assembly with a fixed stir rod.

Steps to Adjust Set Collars on Agitator with a Fixed Stir Rod

Agitator assembly is adjusted while fastened to the kettle (image shown for general reference only).

Step 1. Turn machine OFF, unplug unit, and allow it to cool completely before attempting to adjust the agitator height.


Step 2. Loosen the set screw in the set collar above the crossbar and below the crossbar.

Step 3. Place a 1/32" (1 mm) gauge (thickness of a dime) under the base of the agitator shaft to adjust clearance between the kettle cook surface and the shaft; reference image shown. Once adjusted, re-tighten the set screw in the set collar **above** the crossbar to secure shaft in place.

Step 4. Adjust clearance between the bottom of the crossbar and the **lower** set collar to 1/32" (1 mm) (thickness of a dime); reference image shown. Once adjusted, re-tighten set screw to secure in place.



Step 5. To check for proper adjustment, make sure the stir rod is parallel to the kettle cook surface (it should be close - but not touching).

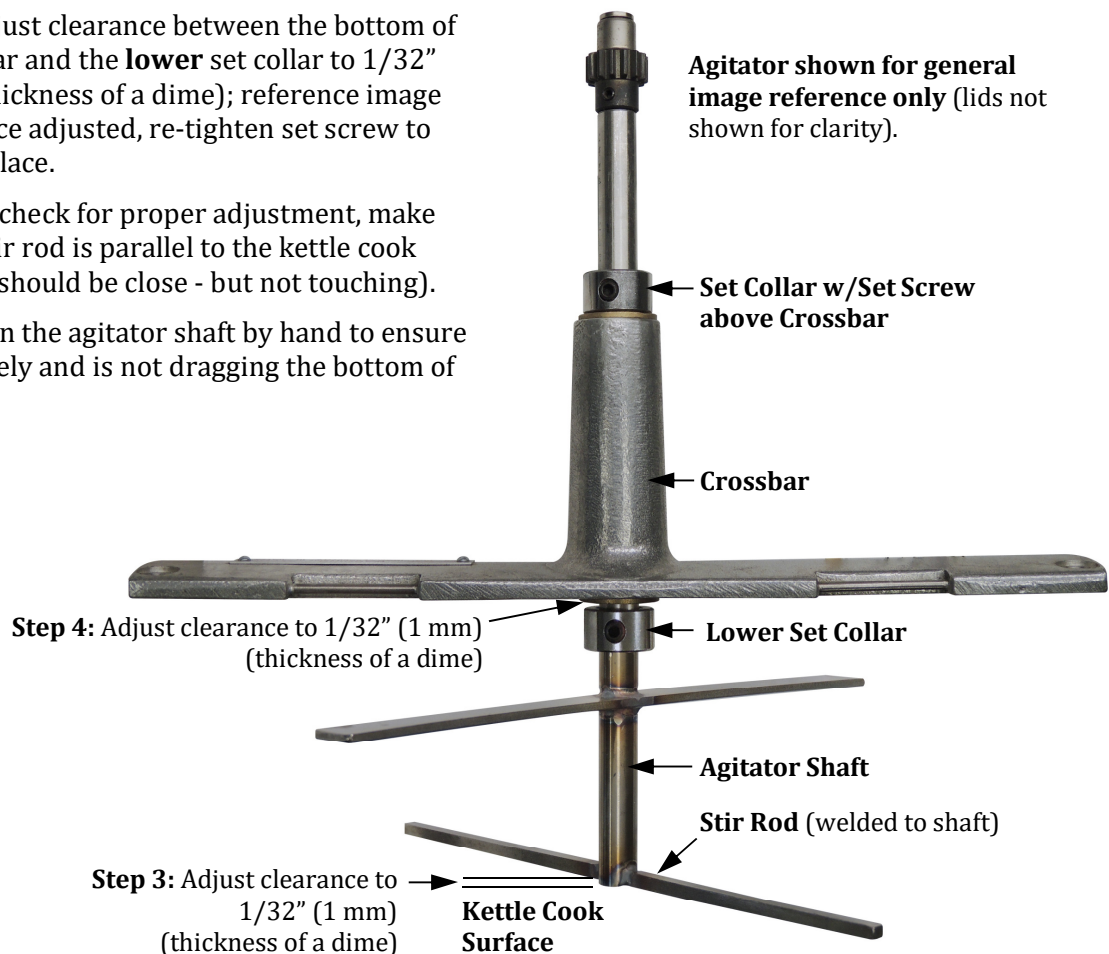

Step 6. Spin the agitator shaft by hand to ensure it spins freely and is not dragging the bottom of the kettle.









MAINTENANCE INSTRUCTIONS

	 DANGER
	<p>Machine must be properly grounded to prevent electrical shock to personnel. Failure to do so could result in serious injury, or death. DO NOT immerse any part of this equipment in water. DO NOT use excessive water when cleaning. Keep cord and plug off the ground and away from moisture. Always unplug the equipment before cleaning or servicing. Make sure all machine switches are in the OFF position before plugging the equipment into the receptacle.</p> <p>008_051514</p>

	 DANGER
	<p>Improper installation, adjustment, alteration, service, or maintenance can cause property damage, injury, or death. Any alterations to this equipment will void the warranty and may cause a dangerous condition. This appliance is not intended to be operated by means of an external timer or separate remote-control system. NEVER make alterations to this equipment. Read the Installation, Operating, and Maintenance Instructions thoroughly before installing, servicing, or operating this equipment.</p> <p>014_020416</p>

	 WARNING
	<p>No user serviceable parts inside. Refer servicing to qualified service personnel.</p> <p>011_051514</p>

	 CAUTION
	<p>THE FOLLOWING SECTIONS OF THIS MANUAL ARE INTENDED ONLY FOR QUALIFIED SERVICE PERSONNEL WHO ARE FAMILIAR WITH ELECTRICAL EQUIPMENT. THESE ARE NOT INTENDED FOR THE OPERATOR.</p> <p>027_010914</p>



ORDERING SPARE PARTS

1. Identify the needed part by checking it against the photos, illustrations, and/or parts list. (General images may be used in manual for reference only.)
2. Use only approved replacement parts when servicing this unit.
3. When ordering, please include part number, part name, and quantity needed.
4. Please include your model number, serial number, and date of manufacture (located on the machine nameplate/data plate) with your order.
5. Address all parts orders to Parts Department, Gold Medal Products Co., 10700 Medallion Drive, Cincinnati, Ohio 45241-4807

or place orders by phone or online:

Phone: (800) 543-0862
(513) 769-7676

Fax: (800) 542-1496
(513) 769-8500

E-mail: info@gmpopcorn.com
Web Page: gmpopcorn.com

Replacing Broken Glass

Broken glass panels can be easily replaced. Gold Medal Products Co. does not ship glass. It can be obtained from a local glass shop, always purchase tempered glass.

GLASS DIMENSIONS (Height x Width x Thickness)

Front and Side Glass: 26.25" x 16.875" x 1/8" (3 Pieces)

1. Turn machine OFF, unplug unit and allow it to cool before attempting to replace glass.
2. Carefully remove all loose pieces of broken glass.
3. Pull out Magnetic Clip located above glass panel in cabinet interior (see Figure A below).
4. Slide glass panel up under top ridge, then swing bottom of panel out and lower it away from unit (see Figures A and B below).
5. Carefully remove the rest of the broken glass.
6. Remove all rigid glass channels from around glass to be replaced, set channels aside for reuse.
7. Apply decals (if desired) to new glass panel.
8. Slide rigid glass channels over exposed edges of new glass panel.
9. Carefully slide new glass panel up under top ridge, then lower it into the bottom channel.
10. Reinstall magnetic clip above the new panel in cabinet interior.

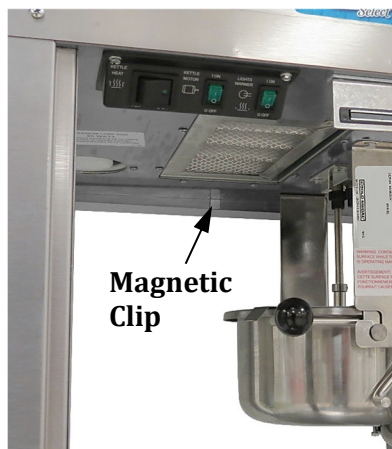


Figure A - Remove magnetic clip located above glass panel.



Figure B - Slide glass panel up under top ridge.


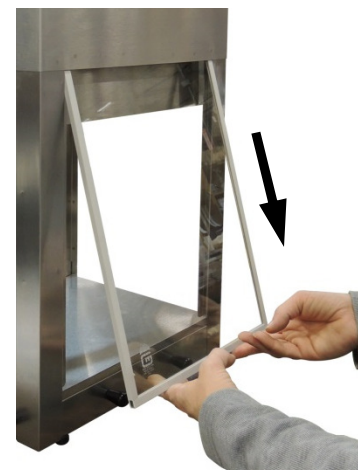


Figure C - Swing bottom of glass panel out, then lower it away from unit.

General images shown for glass installation reference only.




16 oz. Kettle Assembly (55199EX) – Agitator Assembly View

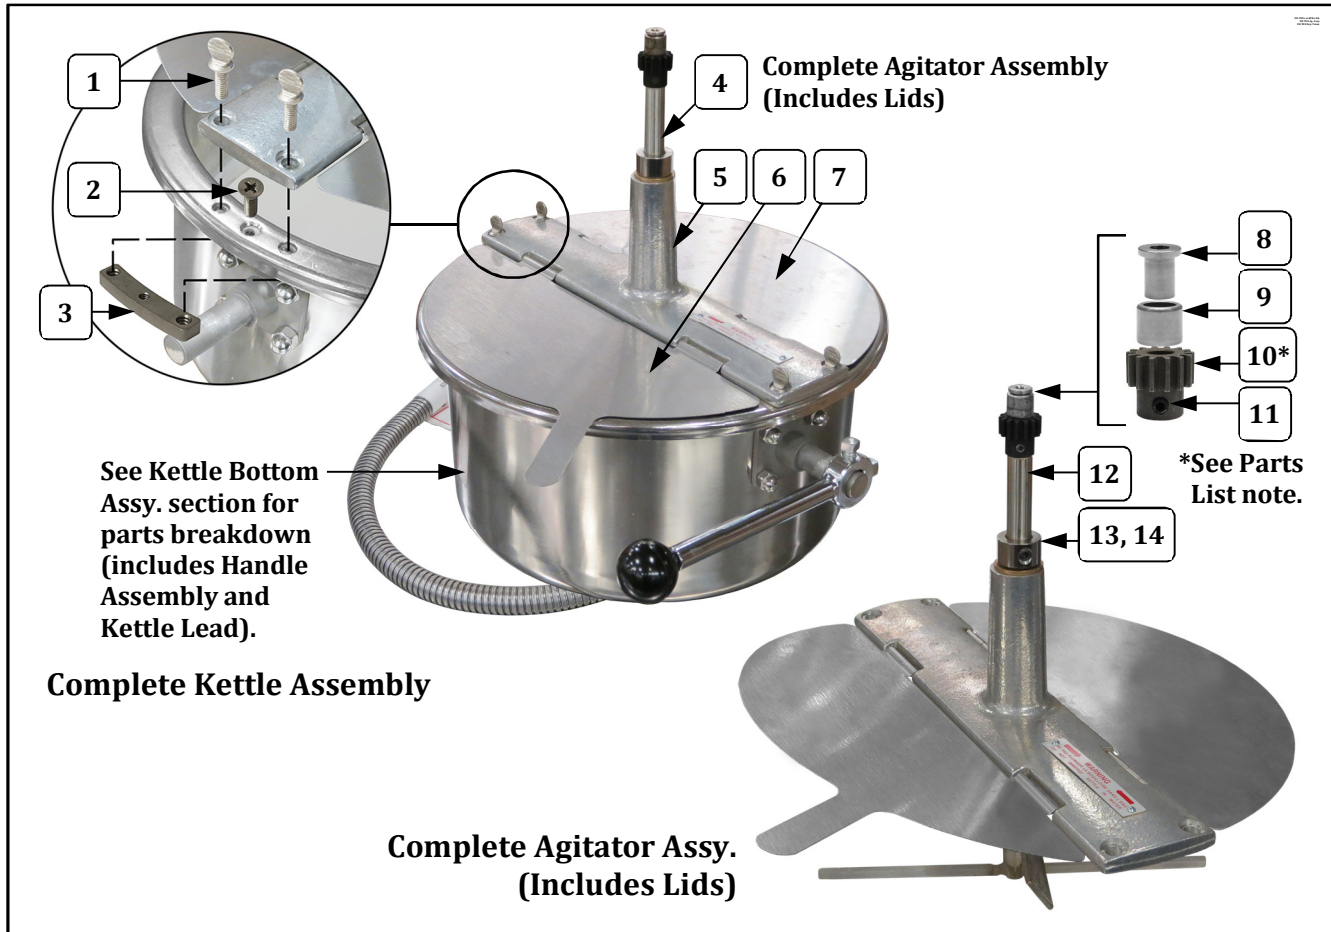

Item	Part Description	Part Number
		55199EX
1	THUMB SCREW 1/4-20 X 3/4	38379
2	10-32 X 1/2 PH FL HD MS	40717
3	THREADED BLOCK	61167
4	LID & AGITATOR ASSEMBLY (Complete Assy.)	41181
5	CROSSBAR ASSEMBLY	41180
6	FRONT LID	41123
7	REAR LID	41120
8	AGITATOR BEARING HUB	43434
9	NEEDLE BEARING	47106
10*	SPUR GEAR KIT (Includes 2 gears with set screws. Always replace Agitator Spur Gear and Kettle Drive Motor Gear as a set.)	47059K
11	10-32 X 3/16 SET SCREW	41742
12	AGITATOR SHAFT ASSEMBLY	41093
13	1/2 ID X 7/8 OD SET COLLAR	47326
14	1/4-20 X 3/16 SET SCREW	47751



16 oz. Kettle Assembly (55199EX) – Kettle Bottom Assembly

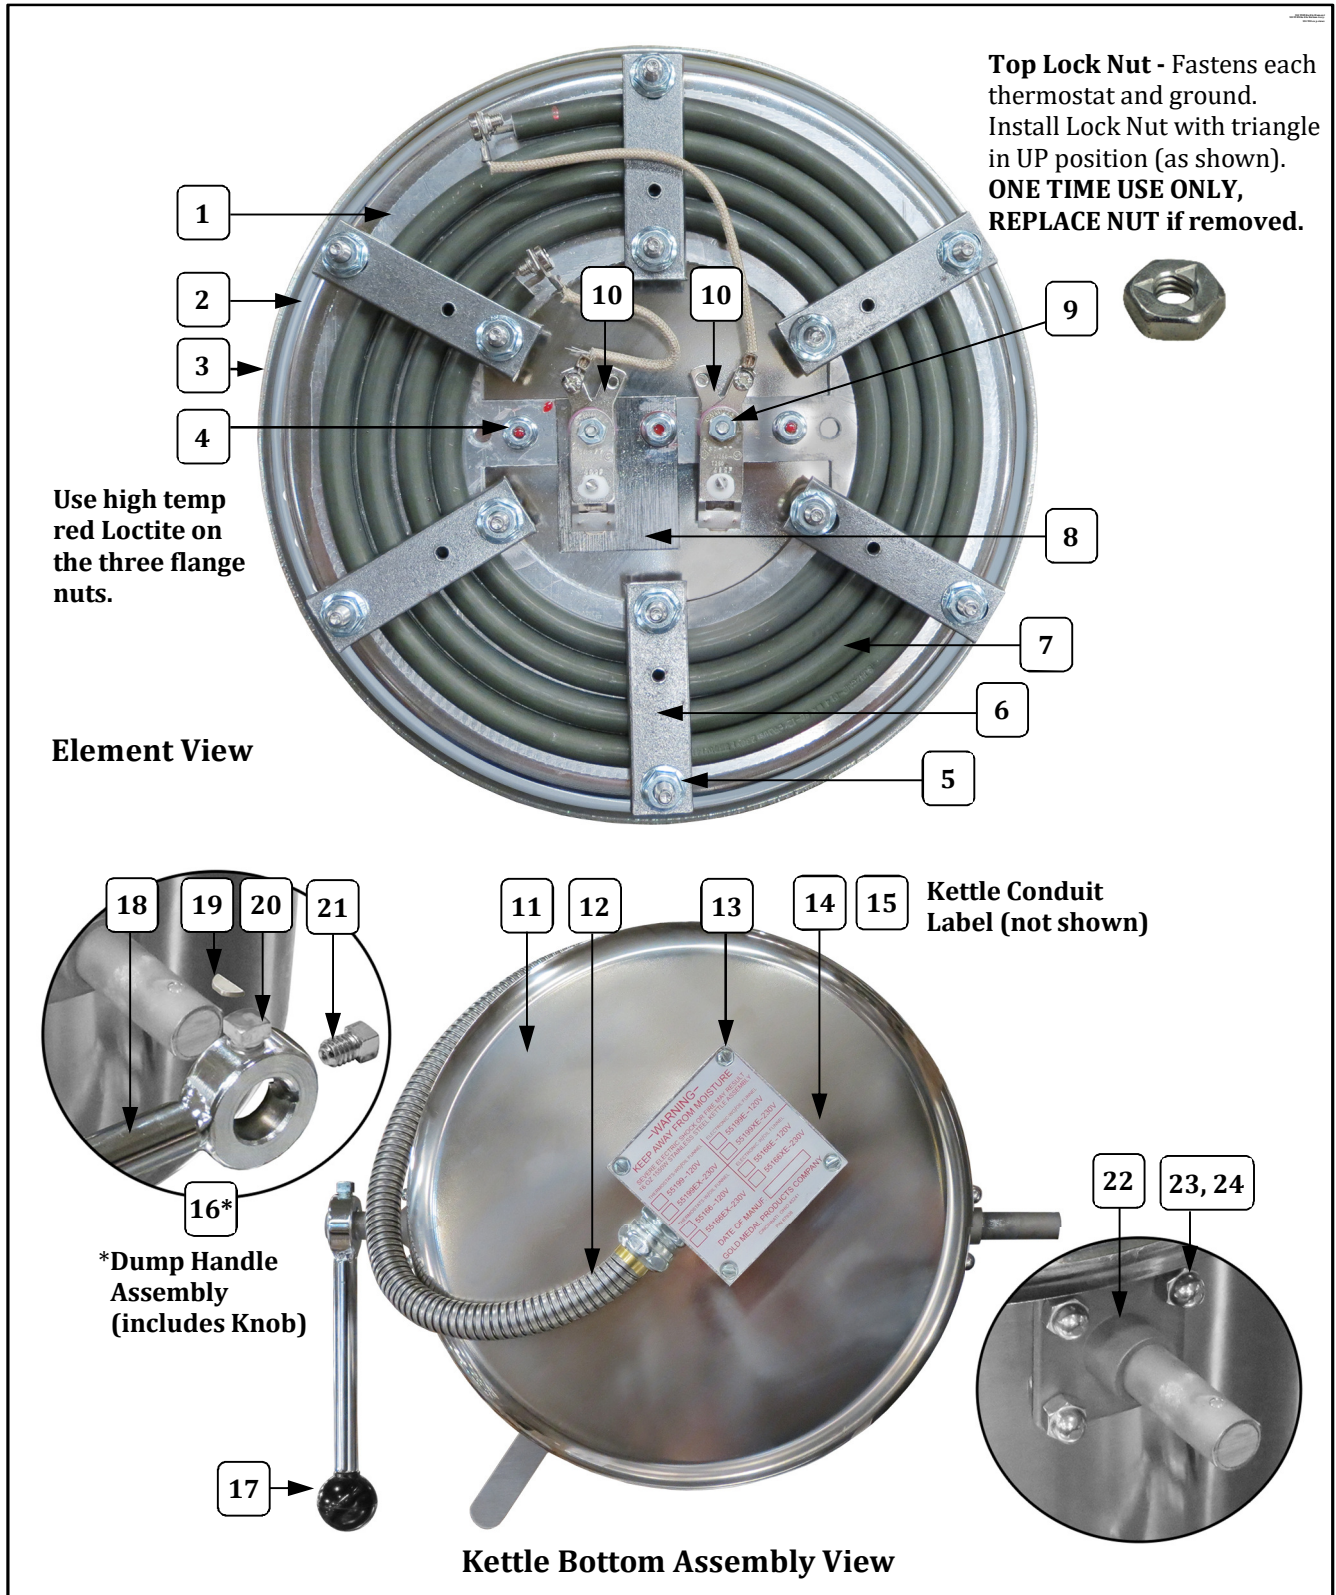




16 oz. Kettle Assy. (55199EX) – Kettle Bottom Assy. – Parts List

Item	Part Description	Part Number
		55199EX
	16OZ KETTLE BOTTOM ASSY (Complete Assy.)	55200EX
1	TRANSFER PLATE ASSY (beneath heat element)	67944
2	KETTLE GASKET	41598
3	KETTLE WELDMENT	67892
4	8-32 SERRATED FLANGE NUT	61151
5	¼ - 20 SERRATED LOCK NUT	46311
6	ELEMENT CLAMP (6 required)	67894
7	1550 TUBULAR HEAT ELEMENT	67014EX
8	LIMIT THERMOSTAT SHIELD	67959
9	8-32 TOP LOCK NUT (always replace if removed)	67943
10	482 F THERMOSTAT (includes two 6-32 screws)	76708
11	KETTLE SHELL ASSEMBLY (has Pivot Pins attached)	41081
12	KETTLE LEAD ASSEMBLY	47361EX
13	8-32 x 3/8 SLT HWHW M/S (fastens Nameplate to Jct. Box, and fastens Jct. Box to Kettle)	42044
14	JUNCTION BOX	47393
15	KETTLE CONDUIT LABEL	82840
16	DUMP HANDLE ASSEMBLY (assembly includes Handle, Knob, 2 SQ HD Screws, and Key)	47102
17	DUMP HANDLE KNOB	47110
18	DUMP HANDLE	47707
19	3 1/8 X ½ WOODRUFF KEY	41730
20	5/16 - 18 X ½ SQ HD SCREW	47725
21	5/16 - 18 X 3/8 SQ HD SCREW (holds key)	47662
22	PIVOT PIN	41426
23	1/4-20 ACORN NUT	42229
24	1/4-20 X 3/8 BUTTON HEAD	12492




Cabinet Exterior – Front View

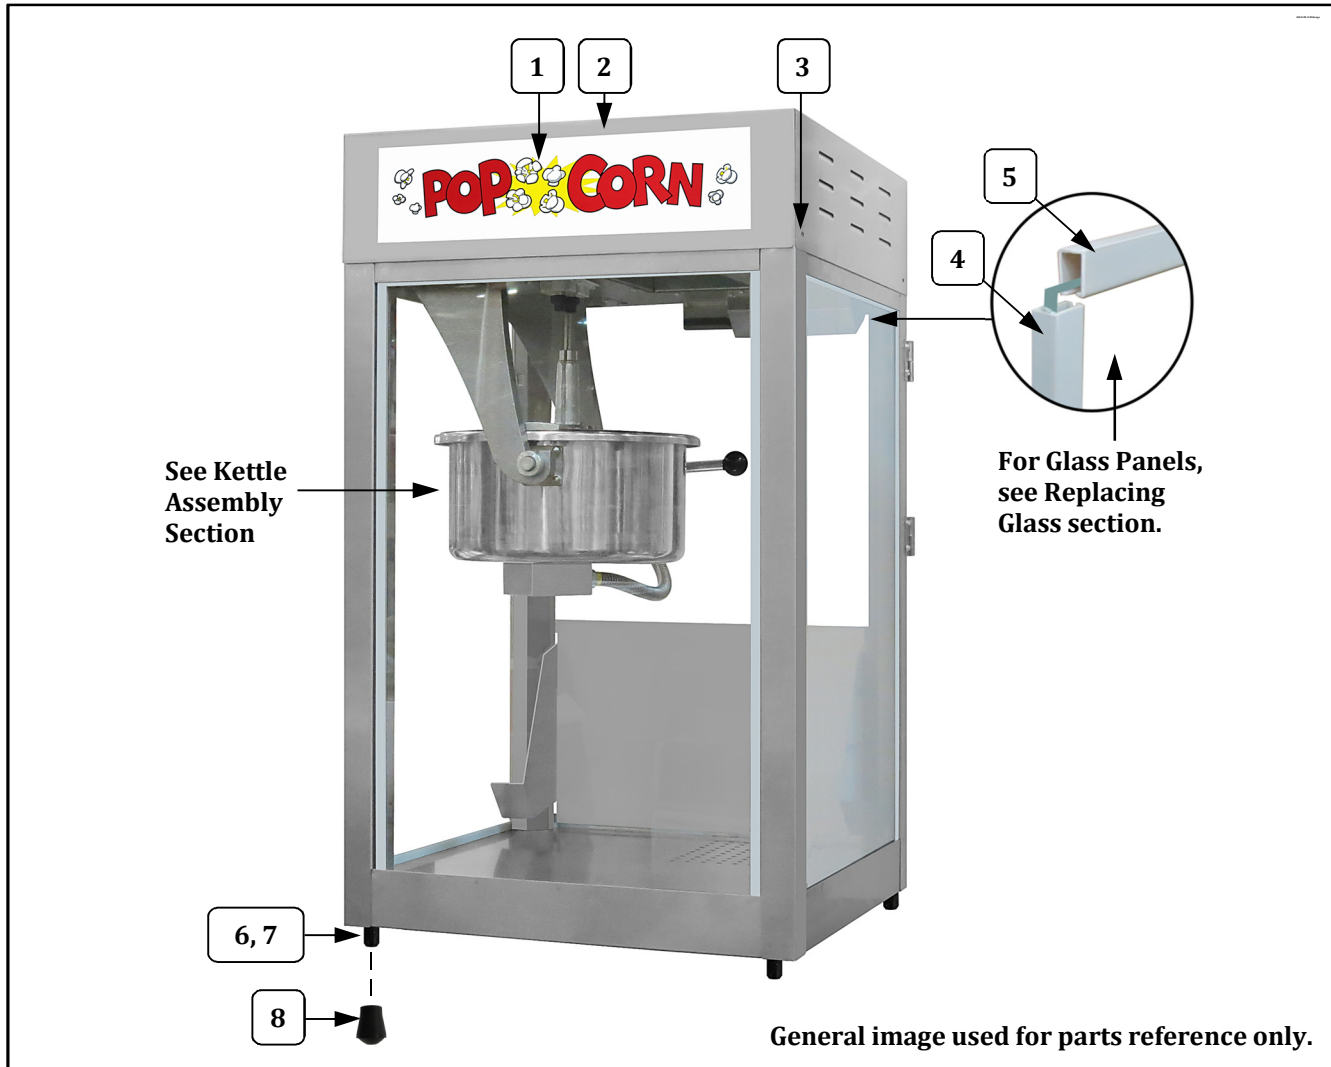

Item	Parts Description	Part Number
		2600EX
1	POPCORN DECAL	49777
2	DOME	77769
3	8-32 X 3/8 SLT. HWH M/S	42044
4	26 1/8" GLASS CHANNEL (used on side edges of front and side glass panels)	61036
5	16 1/4" GLASS CHANNEL (used on top and bottom edges of front and side glass panels)	74172
6	GLIDE	47328
7	10-24 X 3/4 HEX HD	41314
8	BLACK CRUTCH TIP	49123




Cabinet Exterior – Rear View

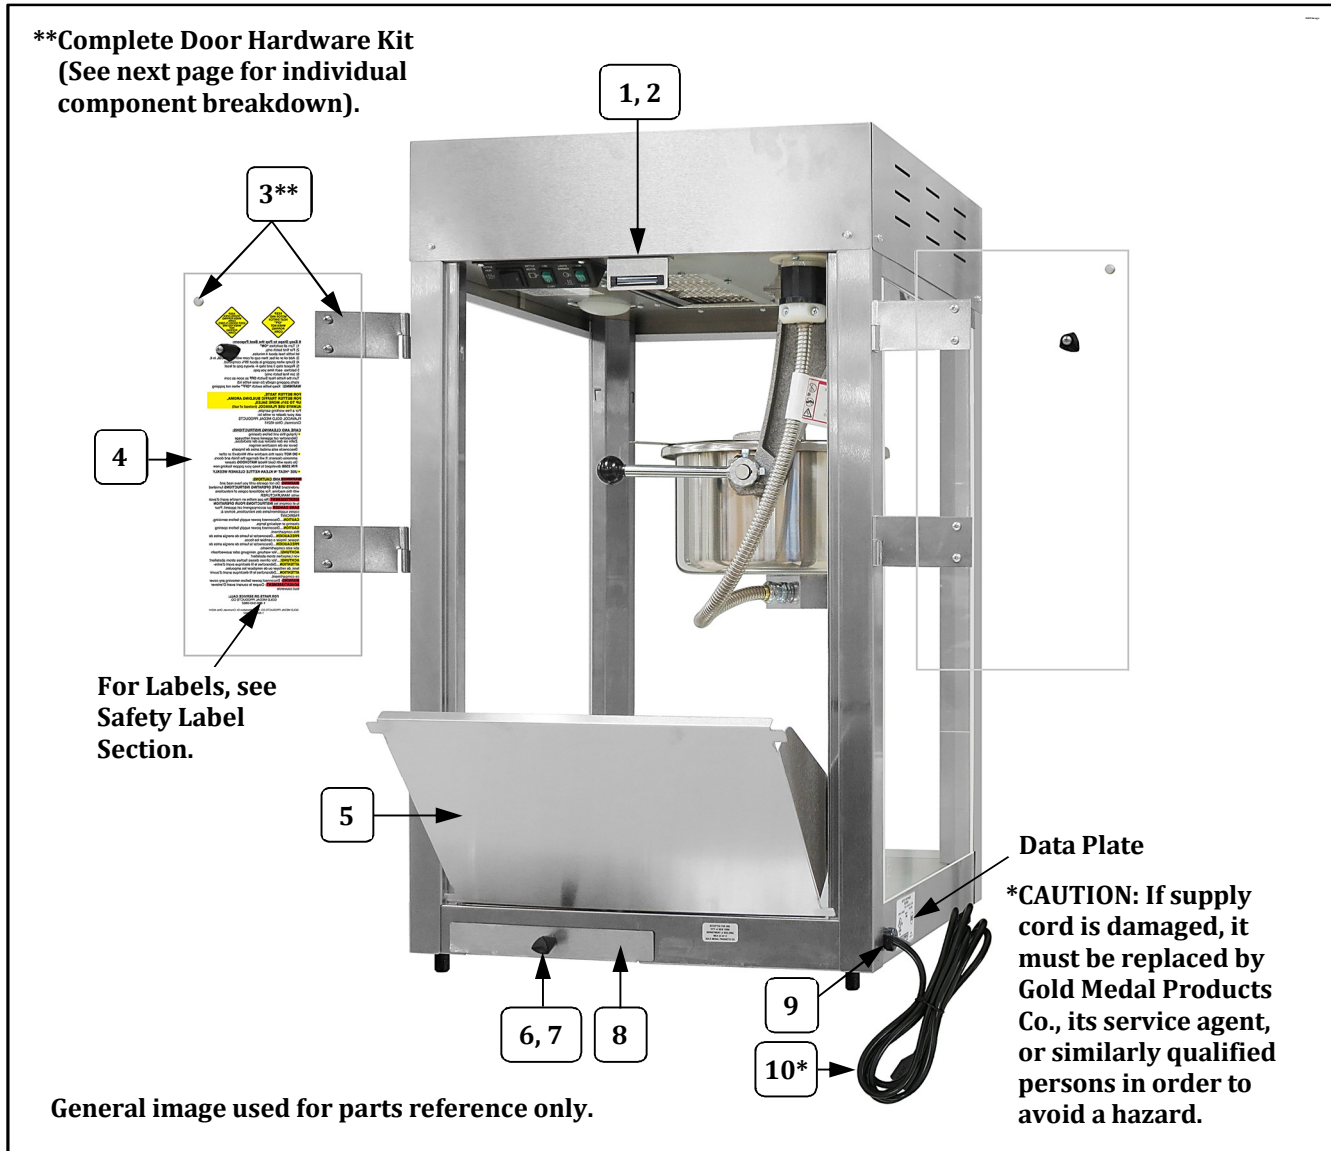

Item	Part Description	Part Number
		2600EX
1	MAGNETIC CATCH	47561
2	MAGNETIC CATCH BRACKET	41340
3**	COMPLETE DOOR HARDWARE KIT	61380
4	DOOR	77774
5	DROP PANEL	17319
6	KNOB LID LIFT	47120
7	8-32" X 3/8" PH PAN W/SEMS	42227
8	OLD MAID PAN	49100
9	SR-7W-2 STRAIN RELIEF	67060
10*	POWER SUPPLY CORD, EXPORT	42369



Door Hardware Kit 61380 – Individual Component Breakdown

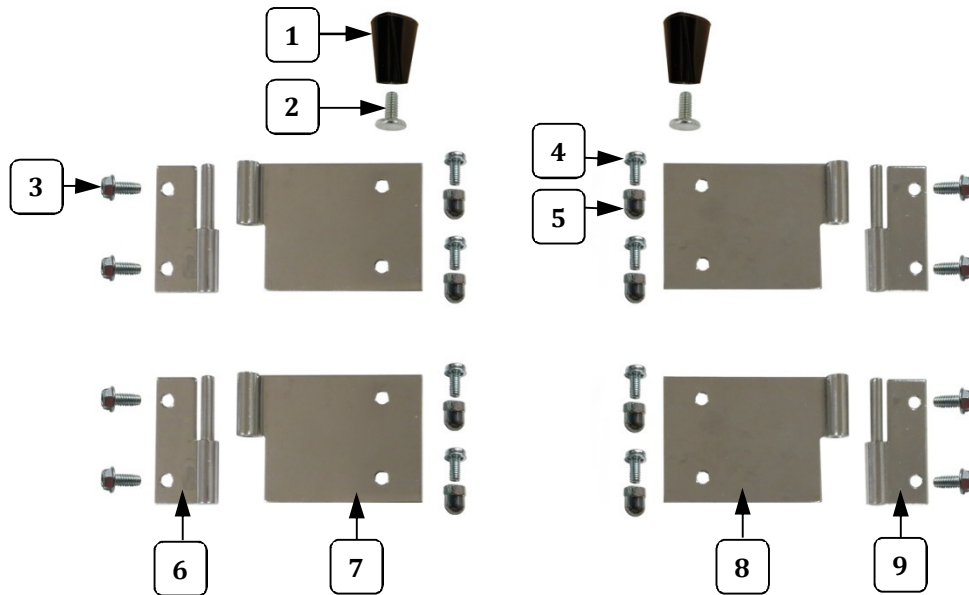


Complete Door Hardware Kit (P/N 61380)
(contains all parts shown above)

Item	Part Description	Part Number
		61380
1	KNOB LID LIFT	47120
2	TEE BOLT	75267
3	8-32 X 5/16 SLOTTED HEX	49594
4	8-32 X 3/8 PH PAN W/SEMS	42227
5	ACORN NUT #8-32	47702
6	MALE HINGE SHORT LEFT	41349
7	FEMALE HINGE LEFT HAND	61359
8	FEMALE HINGE RIGHT HAND	61373
9	MALE HINGE SHORT RIGHT	41350




Cabinet Interior – Hanger Assembly/Controls View

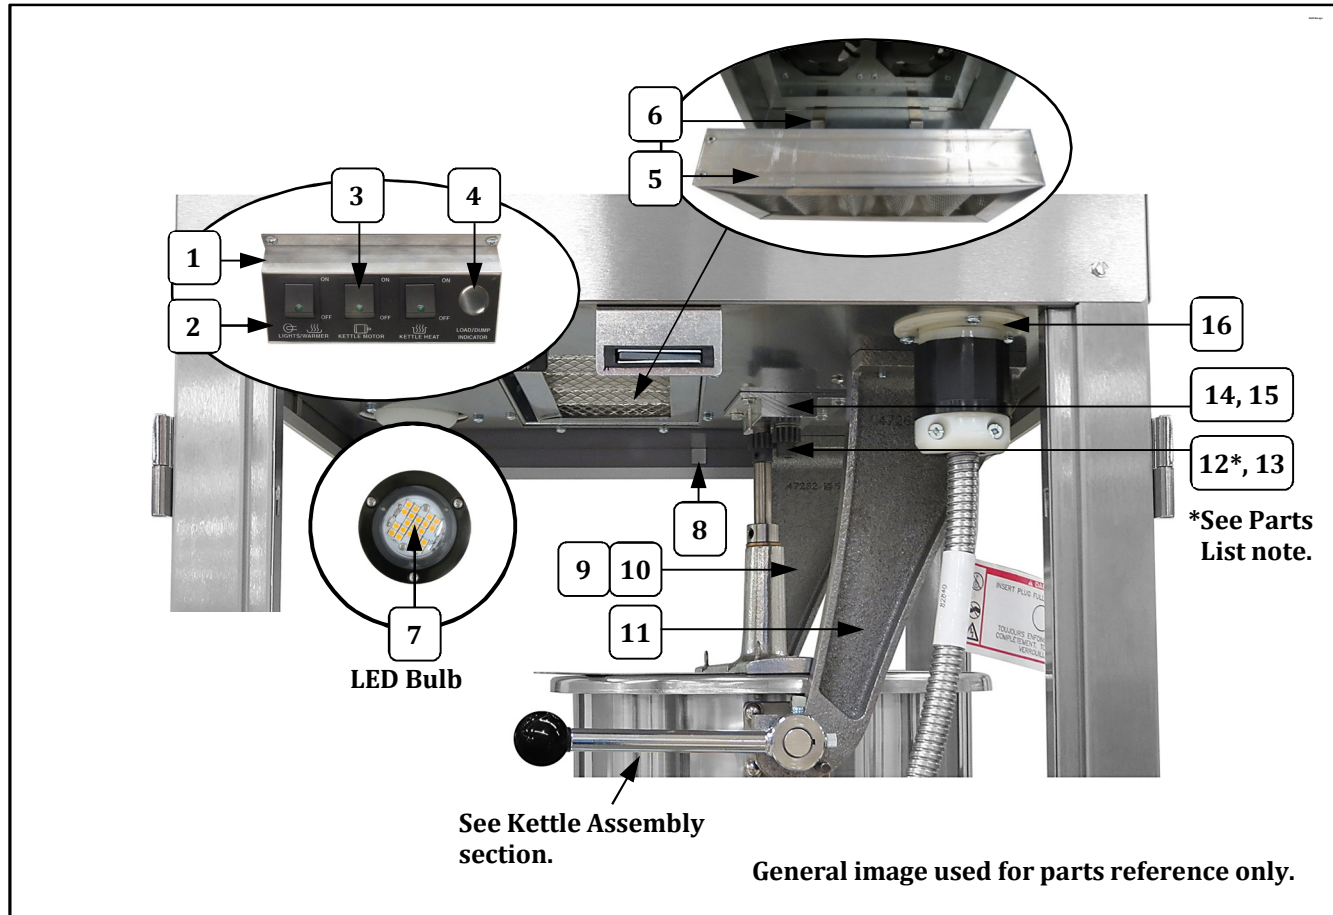

Item	Part Description	Part Number
		2600EX
1	SWITCH BOX	69662
2	SWITCH LABEL	48719
3	GREEN LIGHTED ROCKER SWITCH	42798
4	HOLE PLUG, 1/2 DIA. SS	45395
5	5 X 10 X 2 FILTER	69850
6	FILTER SPRING CLIP	62666
7	LED REPLACEMENT NO PLATE	100554
8	MAGNET 1/2IN OD X 1/2IN T	12078
9	1/4-20 X 3/4 GRADE 5 BOLT (fastens hanger arm)	74520
10	FRONT HANGER ARM	47262
11	REAR HANGER ARM	47263
12*	SPUR GEAR KIT (Includes 2 gears with set screws. Always replace Agitator Spur Gear and Kettle Drive Motor Gear as a set.)	47059K
13	10-32" X 3/16" SET SCREW	41742
14	GEAR BLOCK ASSEMBLY	67194
15	10-24 X 1 HEX MACH SCREW (fastens gear block assembly to kettle drive motor)	49322
16	KETTLE LEAD IN RECPT	47327


Cabinet Interior – Bottom View

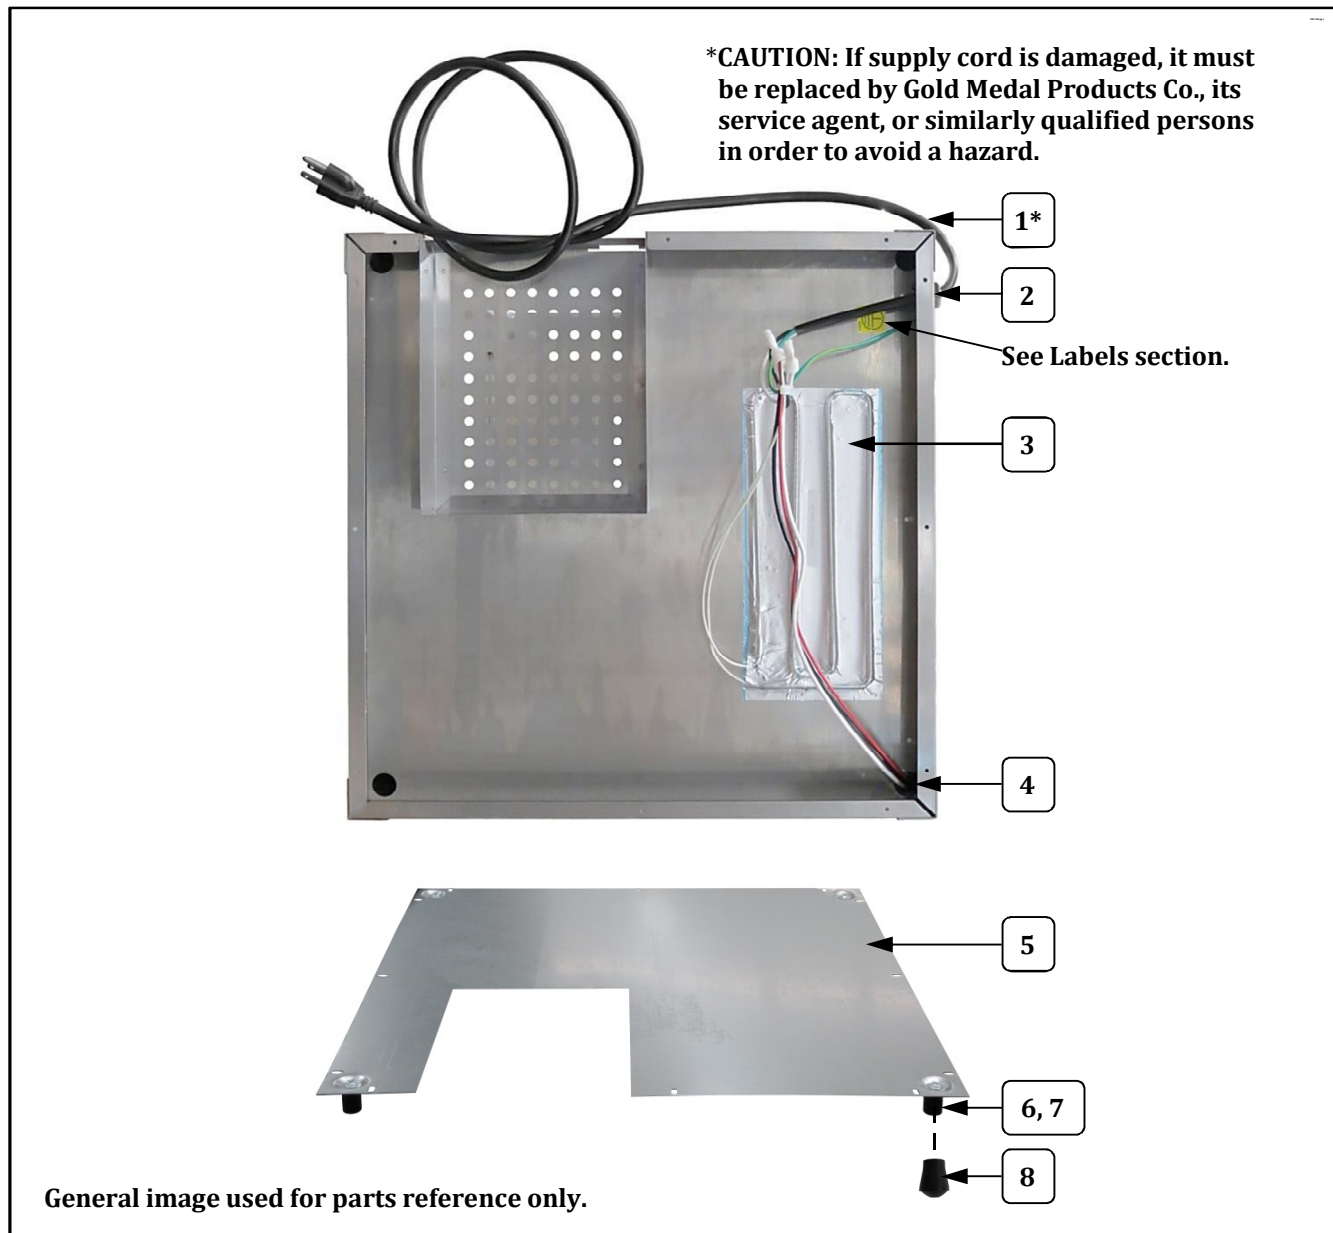

Item	Part Description	Part Number
		2600EX
1	POWER SUPPLY CORD, EXPORT	42369
2	STRAIN RELIEF	67060
3	20W FOIL HEATER	40557EX
4	.875 SNAP BUSHING	45396
5	BOTTOM COVER	49838
6	GLIDE	47328
7	10-24 X 3/4 HEX HD	41314
8	BLACK CRUTCH TIP	49123



Dome Interior – Electrical Components

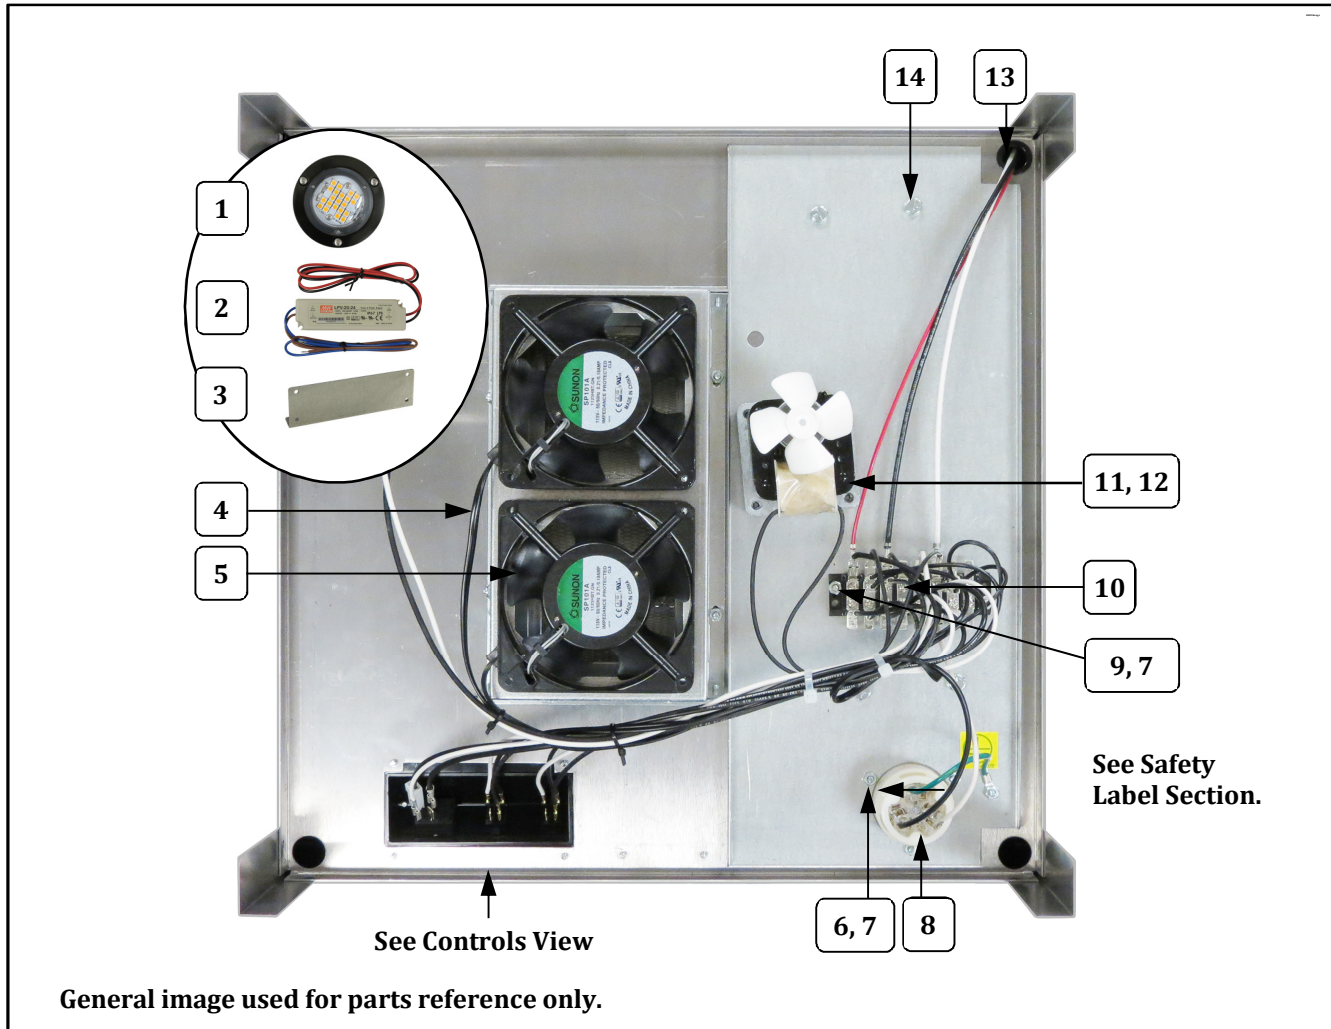

Item	Part Description	Part Number
		2600EX
1	LED REPLACEMENT NO PLATE	100544
2	POWER SUPPLY 24VDC 20W	55394
3	20W POWER SUPPLY BRACKET	55414
4	EXHST BLOWER PLUG & CORD	47199
5	EXHAUST BLOWER	48037
6	8-32 X 1/2 PH PAN W/SEMS	47124
7	8-32 HEX M/S NUT	74149
8	KETTLE LEAD IN RECPT	47327
9	8-32 X 3/4 PHIL PAN MS SS	39007
10	8 POS TERMINAL BLOCK	47208
11	KETTLE DRIVE MOTOR	47067
12	10-24 X 1 HEX MACH SCREW (fastens gear block assembly to kettle drive motor)	49322
13	.875 IN BUSHING, SNAP	45396
14	1/4-20 X 3/4 GRADE 5 BOLT (fastens hanger arm)	74520

Safety Labels

Unit Labels

Power Cord Label

Item	Part Description	Part Number
		2600EX
1	UNIVERSAL POPPER DECAL	41019
2	WARNING, SURFACE CONTACT	87087
3	MAIN GROUND LABEL	42375
4	CONDUIT WARNING LABEL	82840
5	WARNING LABEL CORD	68720

Accessories




Item	Part Description	Part Number
		2600EX
1	STAMPED ALUM SCOOP	2071
2	MEASURE 20 CC	47680
3	MEASURE 6 OZ	49049
4	16OZ CORN MEASURE W/HANDL	68050



Wiring Diagram

Model No. 2600EX

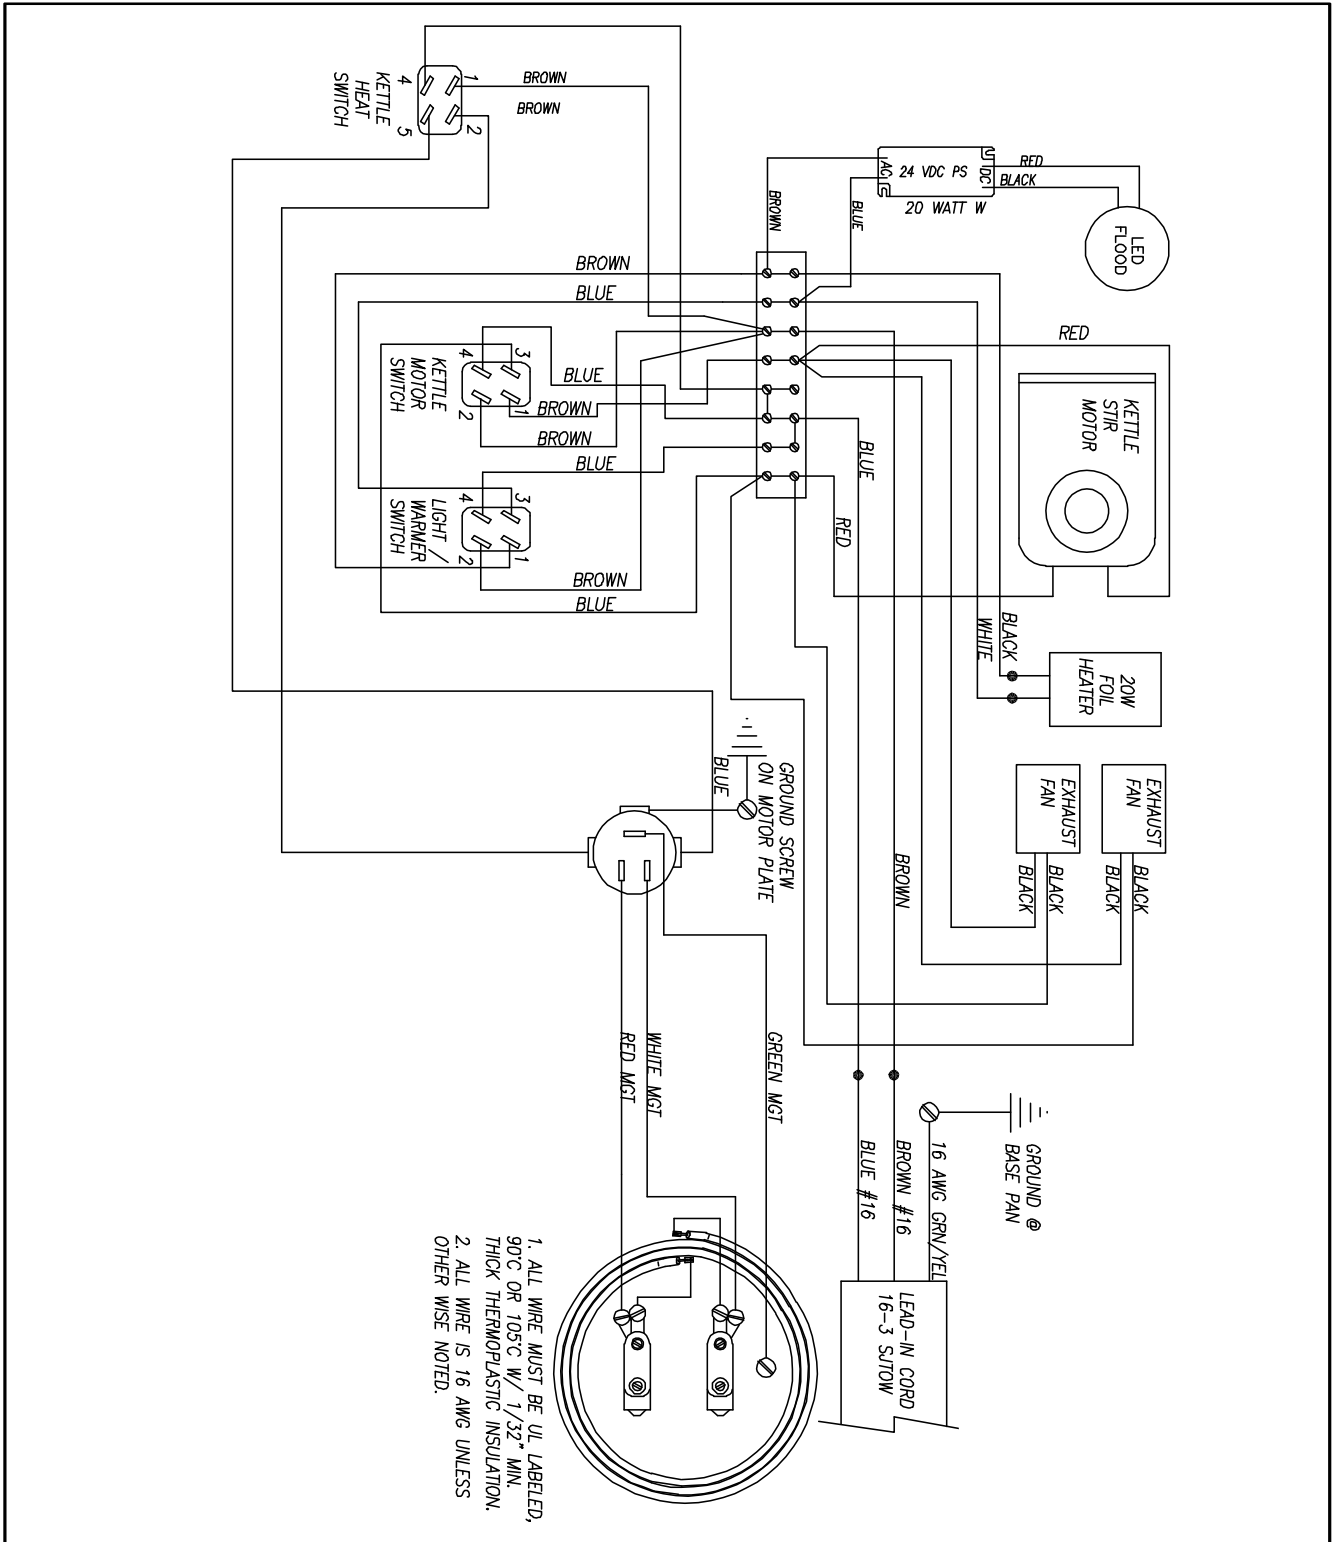



WARRANTY

Gold Medal Products Co. warrants to the original purchaser each item of its manufacture to be free of defects in workmanship and material under normal use and service. Gold Medal Products Co.'s obligation under this warranty is limited solely to repairing or replacing parts, f.o.b. Cincinnati, Ohio, which in its judgment are defective in workmanship or material and which are returned, freight prepaid, to its Cincinnati, Ohio factory or other designated point. Except for "Perishable Parts" on specific machines, the above warranty applies for a period of two (2) years from the date of original sale to the original purchaser of equipment when recommended operating instructions and maintenance procedures have been followed. These are packed with the machine. Parts warranty is two (2) years, labor is six (6) months.

THIS WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES EXPRESSED OR IMPLIED, AND OF ALL OTHER OBLIGATIONS OR LIABILITIES ON OUR PART, INCLUDING THE IMPLIED WARRANTY OF MERCHANTABILITY. THERE ARE NO WARRANTIES WHICH EXTEND BEYOND THE DESCRIPTION ON THE FACE HEREOF. In no event shall Gold Medal Products Co. be liable for special, incidental or consequential damages. No claim under this warranty will be honored if the equipment covered has been misused, neglected, damaged in transit, or has been tampered with or changed in any way. No claim under this warranty shall be honored in the event that components in the unit at the time of the claim were not supplied or approved by Gold Medal Products Co. This warranty is effective only when electrical items have been properly attached to city utility lines only at proper voltages. This warranty is not transferable without the written consent of Gold Medal Products Co.

The term "Original Purchaser" as used in this warranty shall be deemed to mean that person, firm, association, or corporation who was billed by the GOLD MEDAL PRODUCTS CO., or their authorized distributor for the equipment.

THIS WARRANTY HAS NO EFFECT AND IS VOID UNLESS THE ORIGINAL PURCHASER FIRST CALLS GOLD MEDAL PRODUCTS CO. AT 1-800-543-0862 TO DISCUSS WITH OUR SERVICE REPRESENTATIVE THE EQUIPMENT PROBLEM, AND, IF NECESSARY, FOR INSTRUCTIONS CONCERNING THE REPAIR OR REPLACEMENT OF PARTS.

NOTE: This equipment is manufactured and sold for commercial use only.



GOLD MEDAL PRODUCTS CO.

10700 Medallion Drive, Cincinnati, Ohio 45241-4807 USA

gmpopcorn.com

Phone: (800) 543-0862 Fax: (800) 542-1496
(513) 769-7676 (513) 769-8500