



Instruction Manual

ReadyPop[®] Jr. Unit and Base

Export Model No.: 2783 Series and 2793 Series Base



GOLD MEDAL[®] PRODUCTS CO.

10700 Medallion Drive, Cincinnati, Ohio 45241-4807 USA





Table of Contents


SAFETY PRECAUTIONS	3
INSTALLATION INSTRUCTIONS	5
Inspection of Shipment	5
Manual	5
Model Description	5
Items Included with this Unit	5
Sign Options Included.....	6
Additional Options Available—Not Included	6
Setup.....	7
Install Chute Assembly	8
Coil and Corn Pan Removal (Installation)	10
Optional – Mount Unit on a ReadyPop Jr. Base	11
Electrical Requirements	12
Before You Plug In Machine	12
OPERATING INSTRUCTIONS	13
Controls and Their Functions.....	13
Operating Instructions	14
Care and Cleaning	15
Troubleshooting	17
Agitator Set Collar Adjustment	19
—THE FOLLOWING SECTIONS ARE FOR QUALIFIED SERVICE PERSONNEL ONLY—.....	20
MAINTENANCE INSTRUCTIONS	20
ORDERING SPARE PARTS.....	21
Replacing Broken Glass.....	21
8 oz. Kettle Assembly (49472EXN) – Agitator Assembly View.....	22
8 oz. Kettle Assembly (49472EXN) – Kettle Bottom Assembly	23
Cabinet Exterior – Front View.....	24
Cabinet Exterior – Rear View.....	25
Door Hardware Kit 61380 – Individual Component Breakdown.....	26
Cabinet Interior – Hanger Assembly.....	27
Cabinet Interior – Corn Pans.....	28
Dome Interior – Electrical Components	29
Safety Labels.....	30
Accessories	30
Model 2793-01-000 Base	31
Wiring Diagram	32
WARRANTY.....	33





SAFETY PRECAUTIONS

	⚠ DANGER
	<p>Machine must be properly grounded to prevent electrical shock to personnel. Failure to do so could result in serious injury, or death. Make sure all machine switches are in the OFF position before plugging the equipment into the receptacle. Keep cord and plug off the ground and away from moisture. Always unplug the equipment before cleaning or servicing. DO NOT immerse any part of this equipment in water. DO NOT use a water jet or excessive water when cleaning.</p> <p>008_012221</p>


	⚠ DANGER
	<p>Improper installation, adjustment, alteration, service, or maintenance can cause property damage, injury, or death. Any alterations to this equipment will void the warranty and may cause a dangerous condition. This appliance is not intended to be operated by means of an external timer or separate remote-control system. NEVER make alterations to this equipment. Read the Installation, Operating, and Maintenance Instructions thoroughly before installing, servicing, or operating this equipment.</p> <p>014_020416</p>

	⚠ WARNING
	<p>To avoid burns, DO NOT touch the kettle or any heated surface. DO NOT place or leave objects in contact with heated surfaces.</p> <p>013_092414</p>

	⚠ WARNING
	<p>ALWAYS wear safety glasses when servicing this equipment.</p> <p>010_010914</p>

	⚠ WARNING
	<p>No user serviceable parts inside. Refer servicing to qualified service personnel.</p> <p>011_051514</p>

	⚠ WARNING
	<p>Read and understand operator's manual and all other safety instructions before using this equipment. To order copies of the operator's manual go to gmpopcorn.com or write to Gold Medal Products Co., 10700 Medallion Drive, Cincinnati, OH 45241 USA 1-(800)-543-0862</p> <p>022_060215</p>

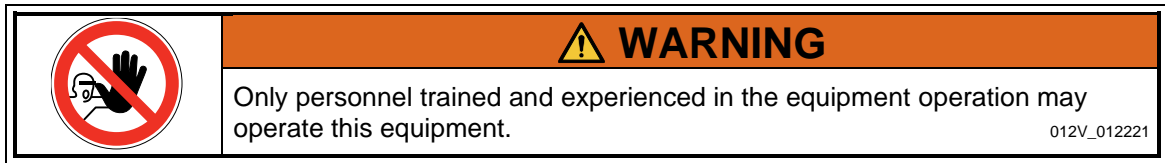

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

DO NOT install equipment in an area where a water jet is used.

Unit to be installed in locations where ambient temperatures are between a minimum of 5°C (41°F) and a maximum of 55°C (131°F).

Unit to be installed in locations where it can be overseen by trained personnel.

Install unit on a level surface.

Unit is a popcorn popper/dispenser.

Note: Improvements are always being made to Gold Medal's equipment. This information may not be the latest available for your purposes. It is critical that you call Gold Medal's Technical Service Department at 1-800-543-0862 for any questions about your machine operations, replacement parts, or any service questions. (Gold Medal Products Co. does not assume any liability for injury due to careless handling and/or reckless operation of this equipment.) General images may be used in manual for reference only.



INSTALLATION INSTRUCTIONS

Inspection of Shipment

After unpacking, check thoroughly for any damage which may have occurred in transit. Claims should be filed immediately with the transportation company. The warranty does not cover damage that occurs in transit, or damage caused by abuse, or consequential damage due to the operation of this machine, since it is beyond our control (reference warranty in back of manual).

Manual

Read and understand the operator's manual and all other safety instructions before using this equipment. To order copies of the operator's manual go to gmpopcorn.com or write to Gold Medal Products Co., 10700 Medallion Drive, Cincinnati, OH 45241 USA 1-(800)-543-0862.

Model Description





 





 

ReadyPop® Jr. is a popcorn popper/dispenser available for countertop use or can be mounted on a base (popper and base sold separately). Front counter unit—doors/controls opposite of customer side. Back counter unit—doors/controls on customer side.

2783-01-000: ReadyPop Jr. – 8 oz. kettle, front counter

2783-01-010: ReadyPop Jr. – 8 oz. kettle, back counter

2793-01-000: ReadyPop Jr. Base with rolling casters and a wastebasket for dispense debris (Base and ReadyPop Jr. sold separately). Optional 6" Shelf (PN 121014) for base is available for purchase separately, shelf fits either side.

Items Included with this Unit

 Aluminum Scoop (PN 2071)	 Flavacol Measure 6.5 cc (PN 47678)	 1/3 Cup Oil Measure (PN 47150)	 1 Cup Corn Measure (PN 47147)	 *Knob (PN 47120) *Knob Plate for RH Door (PN 114868)
 Instruction Manual and Registration Warranty Card	 *Chute Door (PN 116668)	 Chute Cover (PN 114322)	 Cover Knobs (PN 12793)	 *Knob (PN 47120) *Tee Bolt (PN 75267) (for LH Popper Door)
	 Metal Chute (PN 116725)			 Knob (PN 47120) Screw (PN 42227) (for Old Maid Pan)

*Items may be preinstalled.

Images shown are for general reference purposes only, actual part (style/quantity) is subject to change.

Sign Options Included



Sign Panel w/Decal (PN 121110)
(for front counter or back counter use)



Popcorn Decal (PN 49158)
(Decal option incl. w/front
counter units)



Popcorn Decal (PN 115515)
(Decal option incl. w/back
counter units)

Additional Options Available—Not Included

The shelf, mounting options, and box caddy shown below are available for purchase separately. For mounting, reference the installation instructions included with each item.



Optional Shelf (PN 121014,
one shelf) (fits either side
of a 2793 Base)



Catch Bin (2793CB)
(fits front counter or back
counter ReadyPop Jr. units)



Counter Stand (2793CS)
(fits front counter or back
counter ReadyPop Jr. units)




Popcorn Box Caddy
(PN 121441) (magnets
hold caddy in place)

Options shown with popper or base for
reference only (items sold separately).



Setup


1. Remove all packaging and tape prior to operation—remove any protective covering on the plastic panels. Remove accessories and carefully remove kettle packed in cabinet interior.
2. Place unit on a sturdy, level countertop or base. Unit has 4 glide feet preinstalled at the factory with a Black Crutch Tip on each foot.
3. Install the Sign Panel as shown below (or apply optional decal, if desired).

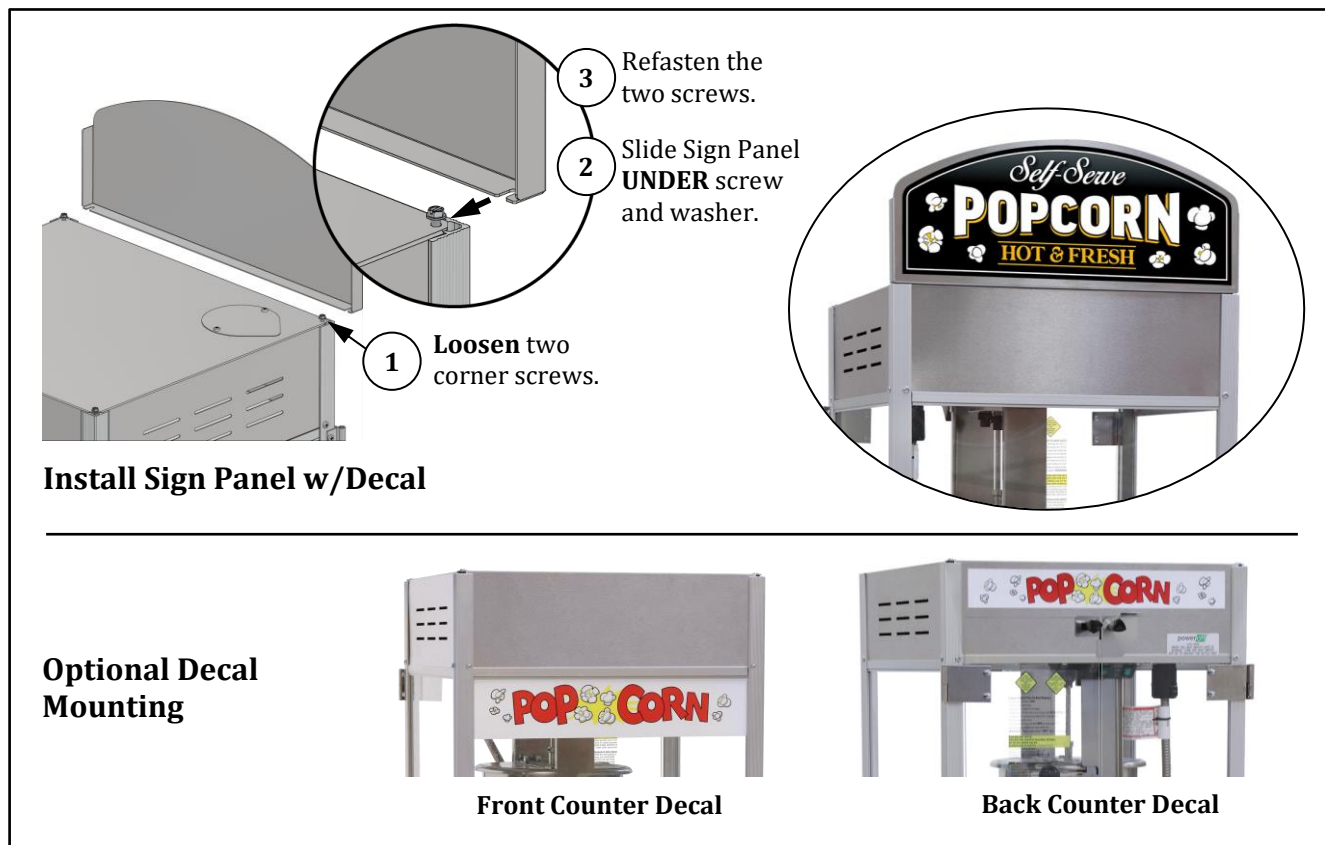

4. Tilt kettle and insert it into hanger arms, then allow kettle to return naturally to an upright position (see image below).
5. Plug kettle lead into receptacle located on ceiling of cabinet interior. Align keyed or hook shaped prong with the correct opening, then push plug all the way in and twist or rotate to lock in place.

To unplug, untwist kettle plug before attempting to pull it from receptacle.

6. Install knobs (if applicable): Install a knob with tee bolt on the LH popper door. Install the door bracket and knob on the RH door (see image below). The door brackets can be locked to help prevent product tampering (lock to be provided by customer). Install knob with screw on old maid pan.

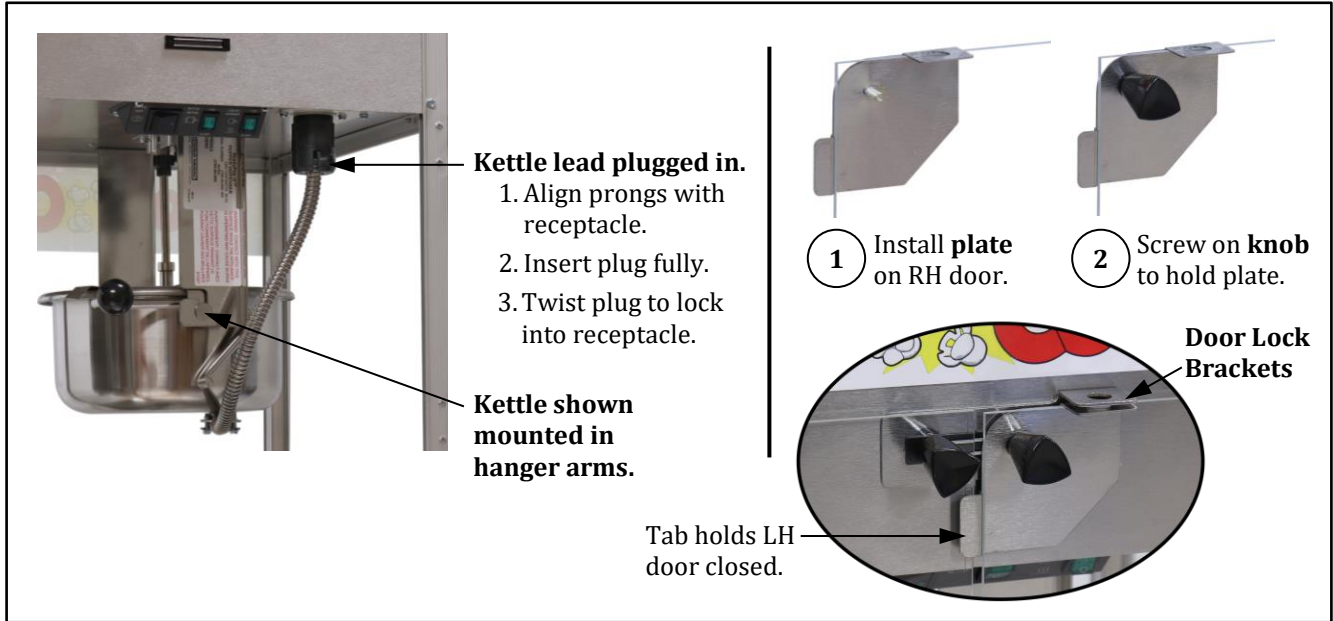


1. Install the chute assembly as described below.

Install Chute Assembly

General images shown for reference.


1. Insert both tabs on chute flap into slots in cabinet.
2. Allow flap to swing down into place—make sure flap swings freely.
3. Fit metal chute over the 4 threaded studs.
4. Install plastic chute cover and secure with the 4 knobs provided.

Twist knobs until finger tight only.

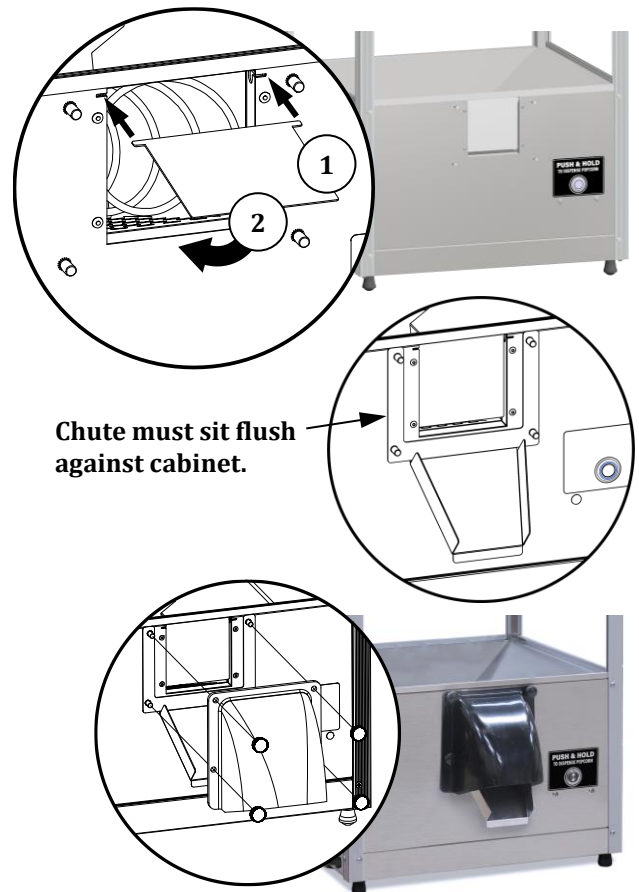



2. Make sure the Corn Pans and Coil Assembly are in position for use (see image below).

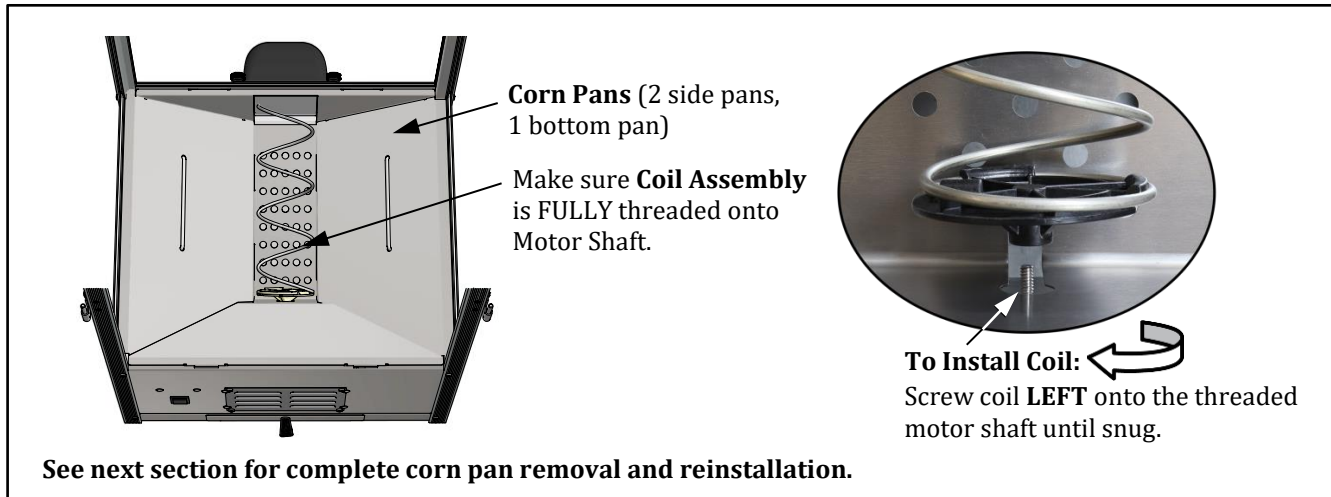


3. Unit should be cleaned prior to use (see Care and Cleaning section).




Coil and Corn Pan Removal (Installation)

Corn Pan Removal

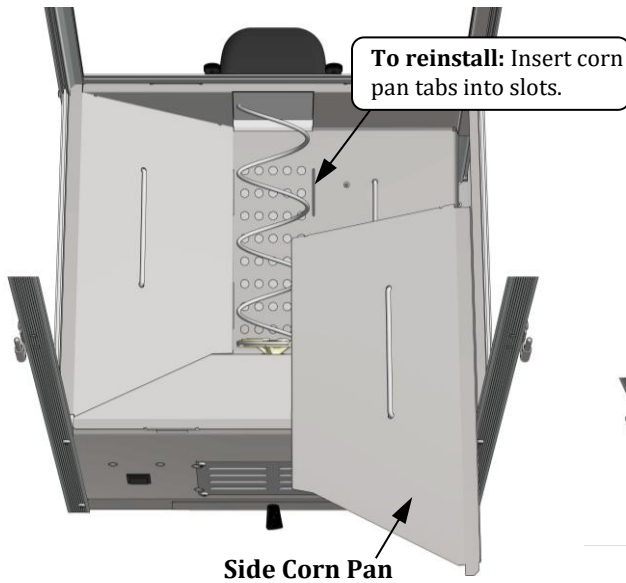

1. Remove both side corn pans—lift by handle to remove.

Coil Assembly Threaded Insert

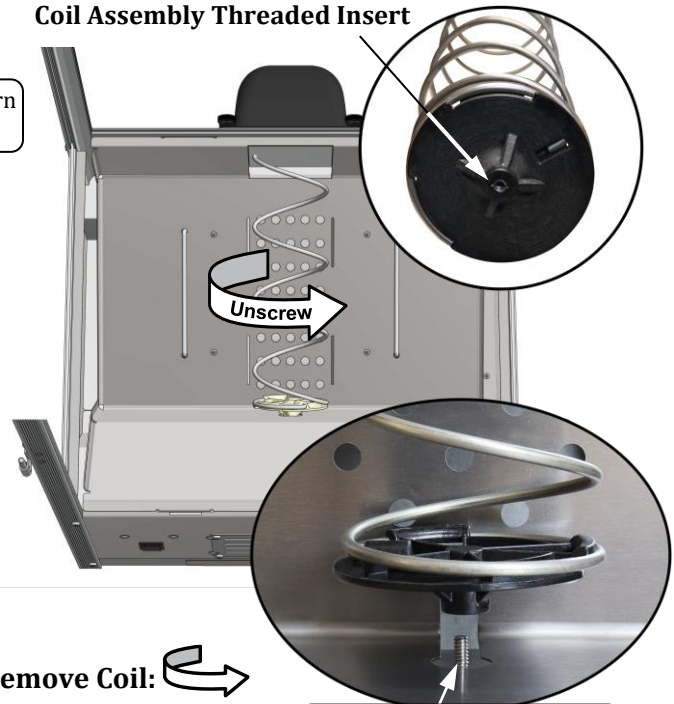


2. **Remove Coil:** Unscrew coil **RIGHT** to remove it from the threaded motor shaft.

To Reinstall Coil: Screw coil **LEFT** onto threaded motor shaft until snug.

3. Lift out bottom corn pan—lift by handles to remove.

Reinstall Corn Pans


4. Insert bottom corn pan.
 - a) Fit corn pan over motor shaft.
 - b) Insert corn pan tabs into slots.
5. Reinstall coil assembly (reference step 2 above).
6. Reinstall side corn pans (reference step 1 above).

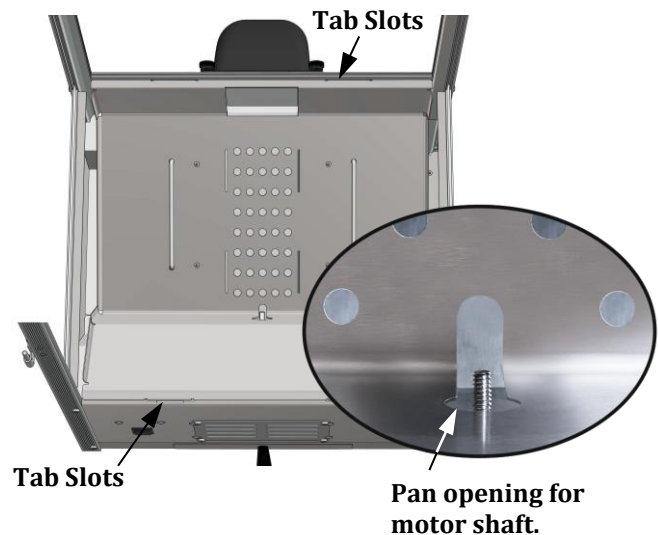




Optional – Mount Unit on a ReadyPop Jr. Base

1. Position base on a level surface and lock the caster wheels into place.
2. Remove wastebasket from base (reference description below).

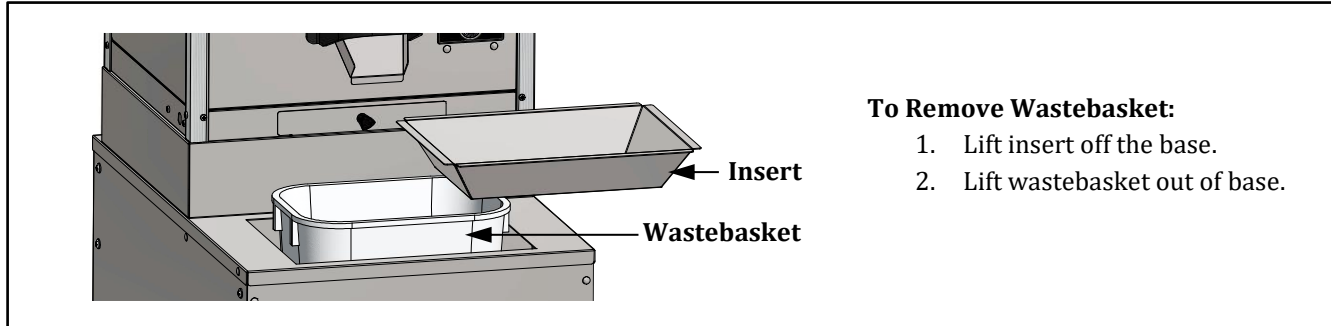

3. Set ReadyPop Jr. on base—position popper so debris bin is under the dispenser and place feet into holes provided, see image below.
4. Fasten unit to base—insert a screw w/washer up through the hole in the base, and into the popper until snug. Repeat for each corner, then tighten all 4 screws to secure.
5. Route the popper's power cord into the base, see image below. Reference the Electrical Requirements section to plug in the power cord from the base.
6. Attach Shelf Option (PN 121014), if applicable (option sold separately).
7. Reinstall wastebasket and insert before use.

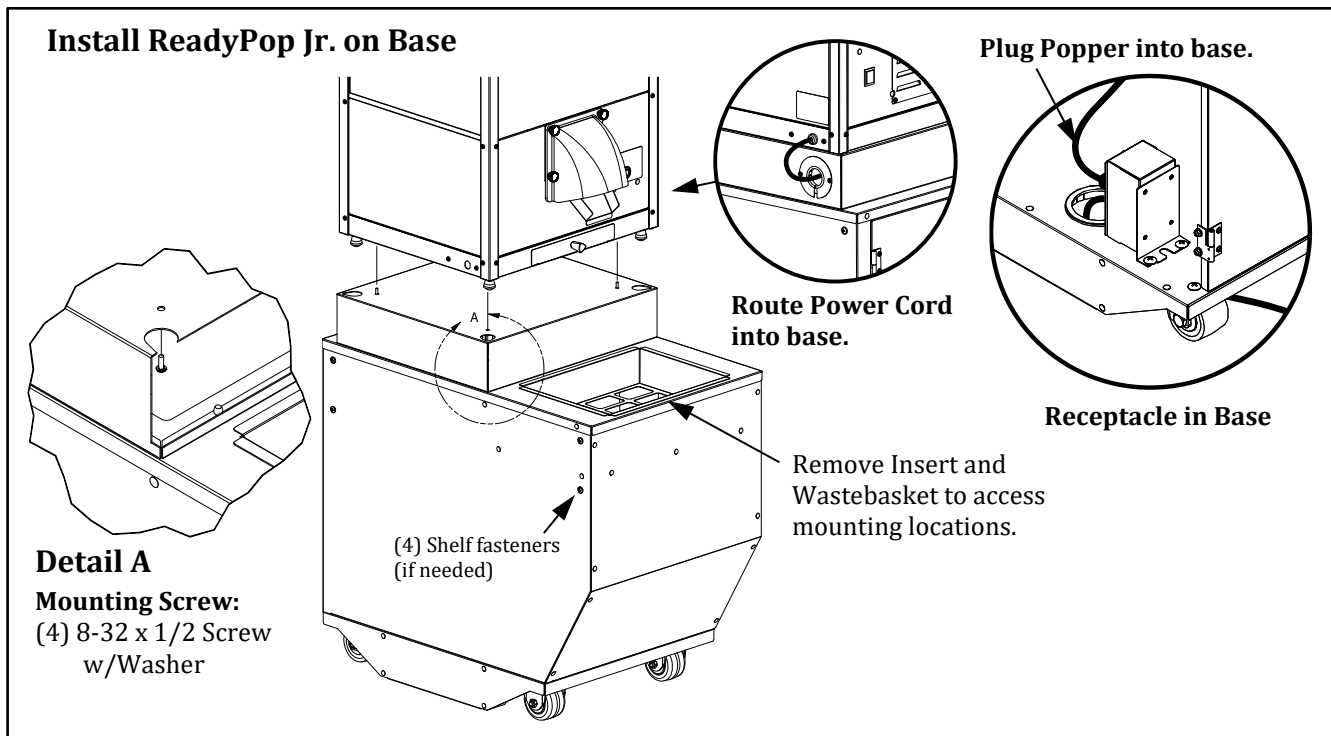



Electrical Requirements

The following power supply must be provided (reference unit Data Plate for Wattage requirement):

220-230 V~, 50/60 Hz

	⚠ DANGER
	<p>Machine must be properly grounded to prevent electrical shock to personnel. Failure to do so could result in serious injury, or death. Make sure all machine switches are in the OFF position before plugging the equipment into the receptacle. Keep cord and plug off the ground and away from moisture. Always unplug the equipment before cleaning or servicing. DO NOT immerse any part of this equipment in water. DO NOT use a water jet or excessive water when cleaning.</p> <p>008_012221</p>

A certified electrician must furnish sufficient power for proper machine operation and install any supplied receptacle (reference unit Data Plate for model specific Volts AC, Hertz, and Wattage requirements). We recommend this equipment be on a dedicated and protected circuit. Failure to wire properly will void the warranty and may result in damage to the machine. It is Gold Medal Products Co.'s recommendation that this machine be plugged directly into a wall outlet. The use of extension cords is not recommended due to safety concerns, and may cause sacrificed and/or reduced performance. Make sure cord is located to prevent a trip hazard or unit upset.

Before You Plug In Machine

1. Make sure all machine switches are OFF before plugging equipment into receptacle.
2. Make sure wall outlet can accept the grounded plugs (where applicable) on the power supply cord.
3. The wall outlet must have the proper polarity. If in doubt, have a certified electrician inspect the outlet and correct if necessary.
4. **DO NOT** use a grounded to un-grounded receptacle adapter (where applicable).
5. Install unit in a level position.

	⚠ CAUTION
	<p>If the supply cord is damaged, it must be replaced by Gold Medal Products Co., its service agent or similarly qualified persons in order to avoid a hazard.</p> <p>039_080614</p>

OPERATING INSTRUCTIONS

Controls and Their Functions

KETTLE HEAT SWITCH

ON/OFF lighted rocker switch - supplies power to the heating element in the kettle. The green switch light ON indicates there is power to the kettle heating element.

KETTLE MOTOR SWITCH

ON/OFF lighted rocker switch - supplies power to the kettle agitator motor. The kettle motor **must always be on** when there is popcorn (popped or un-popped) in the kettle.

LIGHTS/WARMER SWITCH

ON/OFF lighted rocker switch - supplies power to the interior cabinet light, corn pan heat element, and dispense button.

DISPENSE BUTTON

Lighted Push Button Switch – powers the coil assembly for dispensing popcorn.



POWEROFF CONTROL


The control automatically turns the kettle heat off after 15 minutes of idle time (no popcorn popped). This prevents the kettle heat element and thermostat from cycling OFF-ON if the Kettle Heat Switch is left on—it saves power and extends the kettle element/thermostat life.

- When the Kettle Heat Switch is turned ON, and the kettle thermostat switches OFF, the control's 15 minute timer starts—the timer resets after each batch of popcorn.
- The green Kettle Heat Switch light blinks OFF-ON to indicate kettle auto shut-OFF.
- To restart kettle heating, cycle the Kettle Heat Switch OFF-ON.

Operating Instructions

This unit is easy to use and provides a convenient, sanitary way for customers to self-serve portions of popcorn.

1. Turn Lights/Warmer Switch ON (turns on display lights, crisper, and supplies power to the dispense button).
2. Load unit with popcorn (maximum of 6 batches in cabinet), see popping instructions below.
3. Lock the popper doors—helps prevent product tampering (see image).
4. Hold a container under the dispense chute to receive popcorn; press dispense button for desired amount of corn.

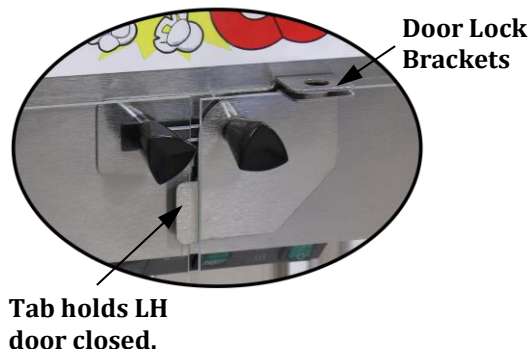

Popping Corn Instructions

The popper is equipped with a corn, salt, and oil measure. We recommend flavored and colored coconut oil. Popcorn popped in coconut oil stays fresh longer and does not leave black deposits in the kettle like other oils. Use only top quality, fresh popcorn from reputable suppliers.

Raw Popcorn Charge:	Use corn measure provided (ex: for 8 oz. Kettle, use 8 oz. corn)
Recommended Oil Volume:	Oil volume is approx. 30% of corn amount (ex: for 8 oz. corn, use 2.6 oz. oil)
Flavacol (Salt) Amount:	Use small Flavacol scoop provided.

Premeasure all ingredients (adjust as needed for desired taste), or for best results use the 8 oz. Mega-Pop® premeasured popcorn and oil pouch, Item No. 2838 (or pouch made for your kettle size).

1. Turn all switches ON.
2. To determine when kettle is ready to pop corn (about 4 minutes), test pop three kernels of corn in one ounce (30 ml) of popping oil. When kernels pop, kettle is ready.
3. Lift kettle lid, pour in popcorn and Flavacol, then add oil; close lid.
4. When corn has finished popping, gently dump the popcorn. (To minimize unpopped kernels, allow corn to finish popping before dumping the kettle.)

Popping Tip: On final batch, turn Kettle Heat Switch OFF just as lids are forced open by the popping corn (kettle has plenty of heat to finish popping). This helps eliminate smoke/odor from any oil residue remaining in kettle.

5. When finished popping, turn KETTLE HEAT and KETTLE MOTOR switches OFF.
NEVER LEAVE THE HEAT ON WHEN YOU ARE NOT POPPING CORN!

Units with a kettle heat auto shut-off feature will automatically shut kettle heat OFF after 15 min. of idle time (no popcorn popped). To restart heating, cycle the Heat Switch OFF-ON.

Care and Cleaning

	⚠ DANGER
	Machine must be properly grounded to prevent electrical shock to personnel. DO NOT immerse in water. DO NOT clean appliance with a water jet or steam cleaner. Always unplug the equipment before cleaning or servicing. 025_051321

	⚠ WARNING
	To avoid serious burns, DO NOT touch the kettle while it is hot! 028_082715

Good sanitation practice demands that all food preparation equipment be cleaned regularly (only use non-toxic, food grade cleaners).

For surfaces needing further cleaning or degreasing, Watchdog Stainless Cleaner (Item No. 2088) or Watchdog Concession Equipment Degreaser (Item No. 2580) is available for use accordingly. For any cleaning products used, follow the manufacturer's instructions on the product. **DO NOT use oven cleaners or abrasive materials** as they will damage parts of machine.

Note: It is extremely important to follow all cleaning procedures, otherwise parts damage and equipment failure will result. The warranty does not cover parts that are damaged due to improper cleaning.

Daily Kettle Cleaning Instructions

1. Turn all switches OFF and unplug the unit.

CAUTION: A hot kettle will cause burns if you touch it. Allow kettle to cool at least 1 hour before attempting to clean. DO NOT use ice or water to cool down a hot kettle! Severe kettle damage will result and steam burns may occur!

2. When cool, wipe **outside** of kettle clean using a clean, soft cloth and Gold Medal Watchdog Stainless Cleaner (Item No. 2088). **DO NOT** use oven cleaners or abrasive materials as they will damage the kettle.
3. Mix 2 tablespoons (29.6 ml) of Gold Medal's Heat'n Kleen (Item No. 2095) in 1 gallon (3.8 L) of water.
4. Only pour enough of the Heat'n Kleen pre-mixed solution into the kettle to fill it 1/2 inch (12.7 mm) deep (it is not necessary to use the entire gallon at once).
5. Plug in unit and turn kettle heat ON. When solution starts to boil, turn kettle heat OFF.
6. Allow kettle to cool at least 1 hour, then dump solution into a bucket, do not spill any in the interior of machine.
7. Rinse kettle interior with clean water and a clean cloth.
8. Dump any water remaining into a bucket (do not spill any in the interior of machine), then wipe the kettle interior clean with a clean dry cloth.




For an extra dirty kettle, the process may be repeated; or, after turning kettle heat OFF, allow solution to sit in kettle overnight. The next morning, finish the cleaning steps.


9. With unit OFF and unplugged, use a clean SLIGHTLY damp cloth (wring ANY EXCESS water from cloth before use) and wipe the kettle lead cord clean. **DO NOT get moisture into the kettle lead-in cord, severe damage will result.**
10. After kettle cleaning, check to be sure the crossbar fasteners on the kettle are securely tightened.

Daily Unit Cleaning Instructions (Base, if equipped)

1. Turn machine OFF, unplug unit and allow it to cool before attempting to clean.
2. Remove the old maid pan, coil assembly, and corn pans—take them to the sink to clean with soap and water, then rinse and dry.

To remove coil and corn pans: (refer to Coil and Corn Pan Removal in Installation section)

 1. Remove any remaining popcorn.
 2. Remove the 2 side corn pans.
 3. Unscrew  coil assembly to remove it from motor shaft.
 4. Lift the bottom corn pan out of unit.
3. As needed, use a vacuum under corn pan to remove any debris.
4. **Units with a Base:** Remove debris from wastebasket and wipe out to clean (discard any popcorn from wastebasket). Reference description below to remove wastebasket—after cleaning reinstall for use.

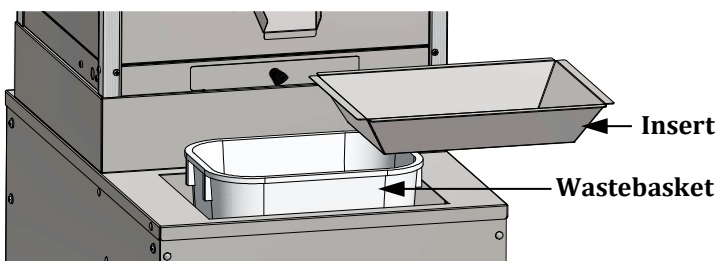

To Remove Wastebasket:

3. Lift insert off the base.
4. Lift wastebasket out of base.

5. Clean area above the corn pans and exterior using a clean, SLIGHTLY damp cloth to remove any grease from glass and cabinet (cloth may be SLIGHTLY dampened with soap and water, then wipe again with clean water to remove any remaining cleaner).
6. Clean glass panels with glass cleaner. Gold Medal Watchdog Glass Cleaner (Item No. 2588) is recommended.

Ammonia cleaners will damage plastic doors/panels. Only use a non-ammonia cleaner, such as Gold Medal Watchdog Glass Cleaner (Item No. 2588).
7. Reinstall the clean and dry pans/accessories.
8. Check the kettle lead cord, make sure it is fully plugged into the kettle receptacle and the plug is fully twisted to lock it into place.



Troubleshooting

Issue	Possible Cause	Solution
No Power to the Unit	A. No Power to the Unit	A. Make sure the unit's power cord is plugged in.
Kettle Does Not Heat	A. Power to the Kettle B. Kettle Heat Switch C. PowerOff Control D. Heating Element	A. Make sure kettle lead-in cord is plugged in and twisted to lock into the kettle receptacle. B. Have a qualified service person check the voltage to and from the Kettle Heat Switch; if switch is defective, replace it. C. Units with the PowerOff Control feature, kettle heat will automatically shut OFF after 15 minutes of idle time (no popcorn popped). The small green neon light in the Kettle Heat Switch will blink OFF-ON to indicate the kettle has been automatically turned OFF. To restart kettle heating, cycle the Heat Switch OFF-ON. Reference the Controls and Their Functions section of this manual. D. Heating element in the kettle may be burned out. Check with a qualified service person for inspection/repair.
Long Popping Cycles (Longer than 4 minutes for Salt Popcorn)	A. Low Voltage B. Inadequate Supply Lines C. Inferior Corn	A. If the machine is operated on low voltage, this could cause the kettle not to reach the proper operating temperature. Check with a qualified electrician. B. Inadequately sized electrical supply lines or use of extension cord, in addition to being a fire hazard, would also prevent the kettle from reaching the proper operating temperature. Check with a qualified electrician. C. Inferior quality corn would result in longer popping cycles. Use only top quality hybrid popcorn from reputable suppliers. Even then, if you let your corn pick up moisture or dry out, your popping cycles will be slow.
Kettle Agitator Shaft not Rotating If the kettle agitator shaft is not rotating, DO NOT pop corn.	A. Kettle Motor Switch B. Kettle Agitator Shaft/Stir Blade not rotating. (Unit must be OFF, unplugged and cool prior to checking or adjusting the agitator assembly.)	A. Make sure the Kettle Motor Switch is ON. If the switch is ON, and the shaft is not rotating, the switch or motor may be faulty, contact qualified service personnel for inspection/repair. B. Kettles with a FLOATING Stir Rod – lift the agitator weight and check the clearance between the shaft and the kettle bottom; it should be a minimum of 1/32" (1 mm) (thickness of a dime). To make shaft adjustments, reference the Agitator Set Collar Adjustment section.



Issue	Possible Cause	Solution
<p>No Popcorn Dispensed</p>	<p>A. Dispense Button/Motor</p> <p>B. Coil Assembly not installed correctly</p> <p>C. Dispense Chute</p>	<p>A. Make sure the unit is plugged in to supply power to the Dispense Button. Check if the Dispense Button LED is ON. If the LED is ON, and popcorn does not dispense when the button is pushed, the button or the motor may be faulty, contact qualified service personnel for inspection/repair.</p> <p>B. Coil Assembly not installed correctly, reference Initial Setup section for instructions to properly install coil assembly on motor shaft.</p> <p>C. Make sure the dispense chute opens freely to allow coil assembly to dispense popcorn.</p>

Agitator Set Collar Adjustment

The following instructions describe how to properly adjust set collars on an agitator assembly with a floating stir rod.



Steps to Adjust Set Collars

1. Turn machine OFF, unplug unit, and allow it to cool completely before attempting to adjust the agitator height.
2. Loosen the set screw in each set collar to be adjusted.
3. With the kettle mounted in the popper, adjust the shaft so the Spur Gears are halfway engaged, and the Needle Bearing is at least halfway engaged in the gear block (reference image at right).

DO NOT set spur gears at full gear contact; it can cause binding as the kettle is dumped.

4. Snug tighten only, the set screw in set collar above the crossbar to hold position. Then, lift the agitator weight and check the clearance between the shaft and the kettle bottom. If there is adequate clearance, fully tighten the set screw to secure set collar in place.
5. Adjust clearance between the bottom of the crossbar and the lower set collar to $1/32''$ (1 mm) (thickness of a dime); then re-tighten set screw to secure in place (reference image).
6. Adjust set collar for agitator weight to be between $3/16''$ to $1/4''$ (4.8 to 6.4 mm) above the agitator weight. Once adjusted, re-tighten set screw to secure in place.

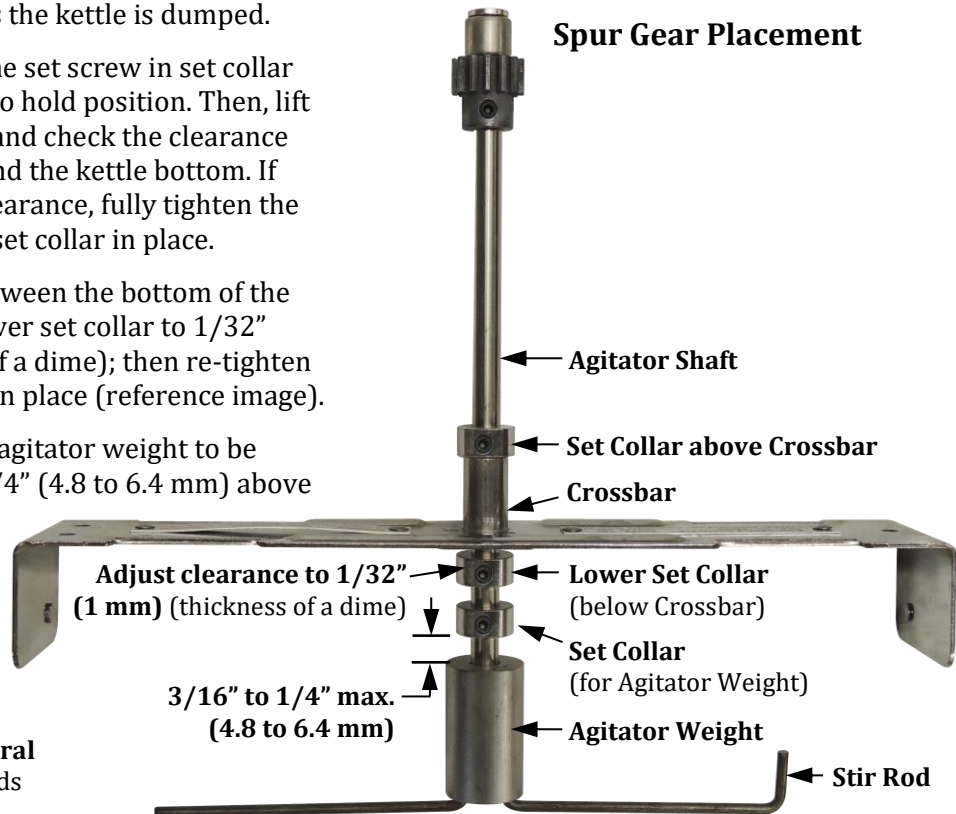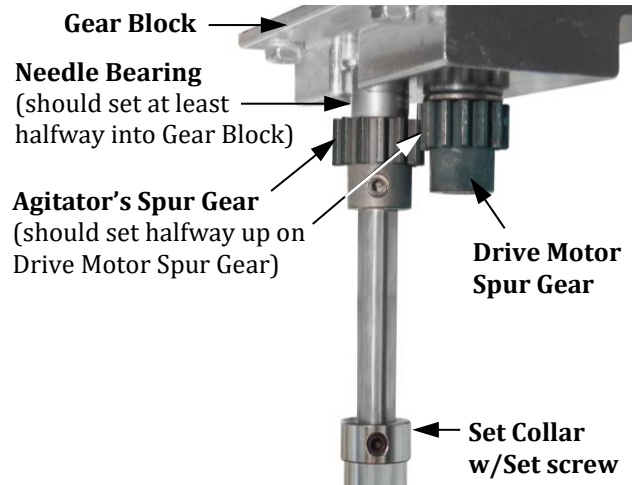

Agitator shown for general image reference only (lids not shown for clarity).









—THE FOLLOWING SECTIONS ARE FOR QUALIFIED SERVICE PERSONNEL ONLY—

MAINTENANCE INSTRUCTIONS

	 DANGER
	<p>Machine must be properly grounded to prevent electrical shock to personnel. Failure to do so could result in serious injury, or death. Make sure all machine switches are in the OFF position before plugging the equipment into the receptacle. Keep cord and plug off the ground and away from moisture. Always unplug the equipment before cleaning or servicing. DO NOT immerse any part of this equipment in water. DO NOT use a water jet or excessive water when cleaning.</p> <p>008_012221</p>

	 DANGER
	<p>Improper installation, adjustment, alteration, service, or maintenance can cause property damage, injury, or death. Any alterations to this equipment will void the warranty and may cause a dangerous condition. This appliance is not intended to be operated by means of an external timer or separate remote-control system. NEVER make alterations to this equipment. Read the Installation, Operating, and Maintenance Instructions thoroughly before installing, servicing, or operating this equipment.</p> <p>014_020416</p>

	 WARNING
	<p>No user serviceable parts inside. Refer servicing to qualified service personnel.</p> <p>011_051514</p>

	 CAUTION
	<p>THE FOLLOWING SECTIONS OF THIS MANUAL ARE INTENDED ONLY FOR QUALIFIED SERVICE PERSONNEL WHO ARE FAMILIAR WITH ELECTRICAL EQUIPMENT. THESE ARE NOT INTENDED FOR THE OPERATOR.</p> <p>027_010914</p>



ORDERING SPARE PARTS

1. Identify the needed part by checking it against the photos, illustrations, and/or parts list. (General images may be used in manual for reference only.)
2. Use only approved replacement parts when servicing this unit.
3. When ordering, please include part number, part name, and quantity needed.
4. Please include your model number, serial number, and date of manufacture (located on the machine nameplate/data plate) with your order.
5. Address all parts orders to Parts Department, Gold Medal Products Co., 10700 Medallion Drive, Cincinnati, Ohio 45241-4807

or place orders by phone or online:

Phone: (800) 543-0862
(513) 769-7676

Fax: (800) 542-1496
(513) 769-8500

E-mail: info@gmpopcorn.com
Web Page: gmpopcorn.com

Replacing Broken Glass


Broken glass panels can be easily replaced. Gold Medal Products Co. does not ship glass. It can be obtained from a local glass shop, always purchase tempered glass.

GLASS DIMENSIONS (Height x Width x Thickness)

Front Glass	22.375" x 16.938" x .125" (568.3 mm x 430.2 mm x 3.2 mm)
Side Glass (2 pieces)	22.375 x 14.938" x .125" (568.3 mm x 379.4 mm x 3.2 mm)

1. Turn machine OFF, unplug unit and allow it to cool before attempting to replace glass.
2. Remove all loose pieces of glass (popper units: kettle may be removed to change glass).
3. Place a bungee (or large rubber band) around the unit to help hold the corner posts in place, then remove dome.
4. Remove all rigid glass channels from around glass to be replaced, set channels aside for reuse.
Note: The rigid channels may be wedged in the corner posts or top and bottom glass extrusions and must be removed before new glass can be installed.
5. Carefully remove the rest of the broken glass.
6. Apply decals (if desired) to new glass panel.
7. Slide rigid glass channels over exposed sides and bottom of new glass panel.
8. Lift motor plate just enough to allow the new glass panel to slide into the corner posts and down into the bottom glass extrusion.
9. Carefully lower the motor plate until the top glass extrusion secures glass in place.
10. Reinstall dome and remove bungee (popper units: reinstall kettle if removed).

8 oz. Kettle Assembly (49472EXN) – Agitator Assembly View

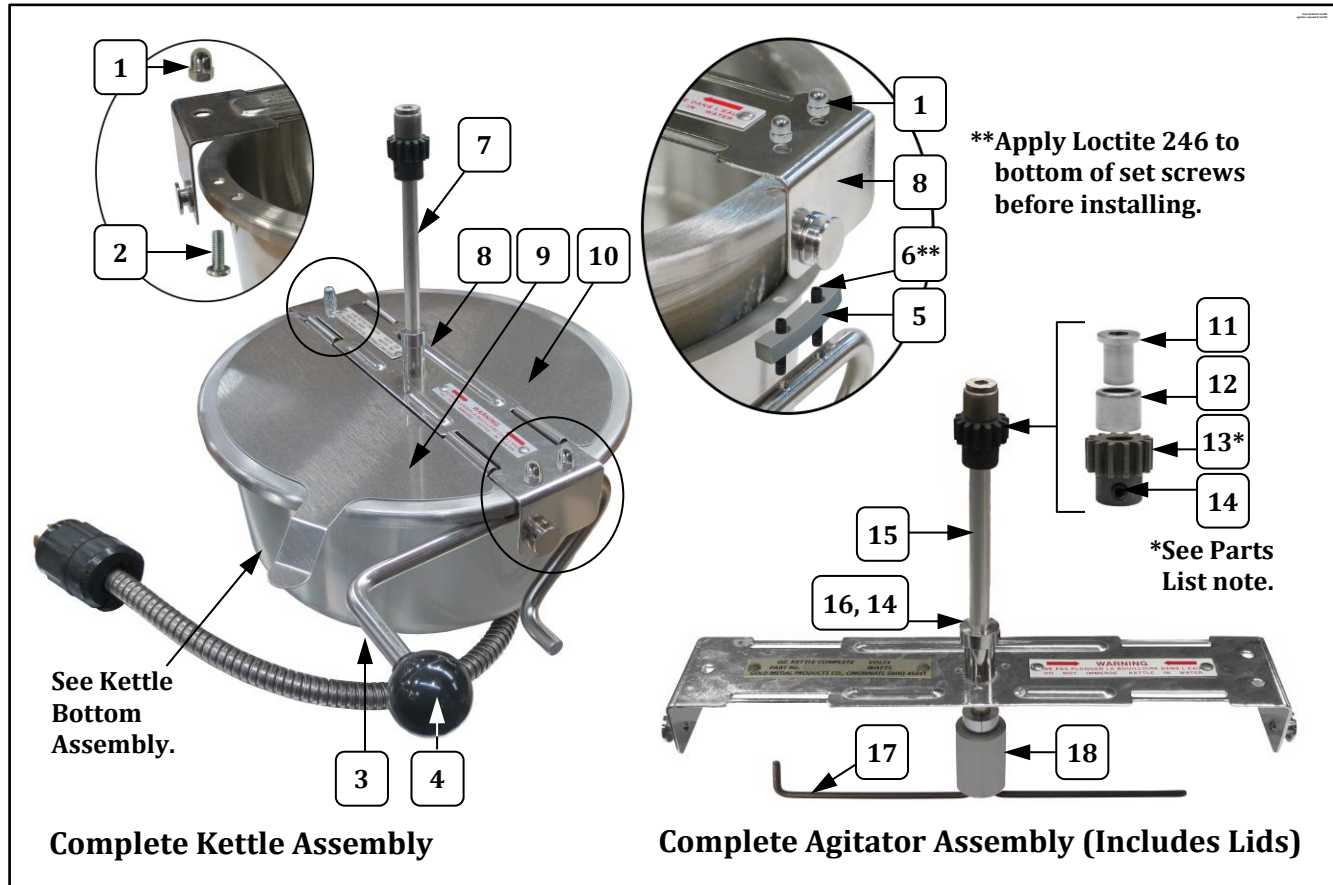

Item	Part Description	Part Number
		49472EXN
1	ACORN NUT	47702
2	8-32 X 1/2 PHIL PAN M/S	47141
3	DUMP HANDLE RH	49314
4	DUMP HANDLE KNOB	47110
5	SPACER (For Dump Handle)	49362
6	8-32 X 1" SET SCREW	77933
7	LID & AGITATOR ASSY (Complete Assembly)	49906EXN
8	KETTLE CROSSBAR ASSEMBLY	49907EXN
9	FRONT LID W/FORMED LIFTER	49017
10	REAR KETTLE LID	49016
11	AGITATOR BEARING HUB	43434
12	NEEDLE BEARING	47106
13*	SPUR GEAR KIT (Includes 2 gears with set screws. Always replace Agitator Spur Gear and Kettle Drive Motor Gear as a set.)	47059K
14	SET SCREW #10-32 X 3/16	41742
15	6 OZ. AGITATOR SHAFT	69710
16	SET COLLAR 5/16 ID 5/8 OD	46649
17	6 OZ. STIR ROD	69714
18	AGITATOR WEIGHT	69715



8 oz. Kettle Assembly (49472EXN) – Kettle Bottom Assembly

1 Kettle Bottom Assembly

2 Kettle Shell

3 Kettle Lead-in Assembly Plug

As of February 1, 2016, the **EXPORT** Kettle Lead-in Assembly Plug is 230V (NEMA L-6). When replacing the lead-in assembly, ensure the kettle receptacle will match the new configuration (see image below).

Element View

Lock Nut View

Thermostat


11 Top Lock Nut - Fastens thermostat. Install Lock Nut with triangle in UP position (as shown). **ONE TIME USE ONLY, REPLACE NUT if removed.**

Export L6-15R Kettle Recept. (P/N 49330EX)

Export L6-15P Kettle Plug Configuration


Item	Part Description	Part Number
		49472EXN
1	8 OZ. KETTLE BOTTOM ASSEMBLY (Complete Assembly - includes parts listed below)	49489EXN
2	KETTLE SHELL	49431
3	KETTLE LEAD ASSEMBLY	49490
4	6 OZ. KETTLE GASKET	49368
5	6 OZ. CLAD KETTLE	49596
6	230V 1125W HEAT ELEMENT	49578
7	ELEMENT CLAMP	49532
8	5/16-18 SERRATED LOCK NUT	49317
9	5/16-18 X 3/4 SQUARE HEAD BOLT	49446
10	8-32 x 5/16 SLOTTED HEX (fastens ground)	49594
11	8-32 TOP LOCK NUT (always replace if removed)	67943
12	8-32 x 1 SS HEX SC (holds Thermostat)	49076
13	450°F THERMOSTAT (includes two 6-32 Screws)	76089

Cabinet Exterior – Front View

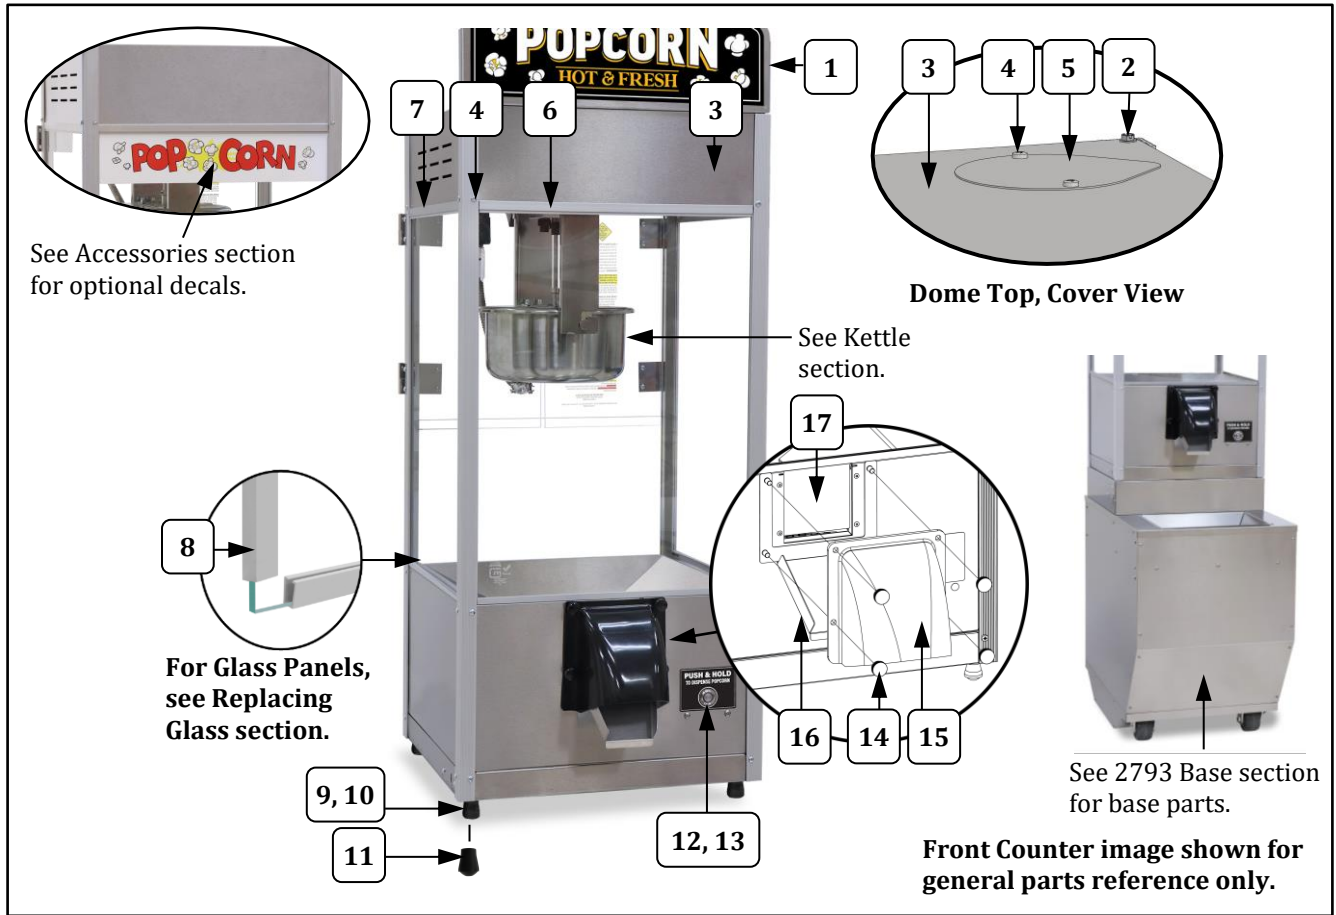

Item	Part Description	Part Number
		All Models
1	SIGN PANEL WITH DECAL	121110
2	8-32" X 5/8" TYPE 23 HX HD	49052
3	DOMES	114861
4	SCREW #8-32X3/8 PAN HD PH	74141
5	COVER	114862
6	GLASS EXTRUSION (Front Glass)	74164
7	GLASS EXTRUSION (Side glass)	49508
8	21 5/8" GLASS CHANNEL (for side edges of glass)	49509
	15" GLASS CHANNEL (for top/bottom of side glass)	49510
	17" GLASS CHANNEL (for top/bottom of front glass)	49511
9	GLIDE FOOT (2 required)	47328
10	10-24 X 3/4 HEX HD	41314
11	BLACK CRUTCH TIP	49123
12	PUSHBUTTON 24V BLUE RING	114957
13	DISPENSE LABEL	114269
14	KNOB BLACK 1/4-20	12793
15	CHUTE COVER	114322
16	DISPENSER CHUTE	116725
17	CHUTE DOOR	116668


Cabinet Exterior – Rear View

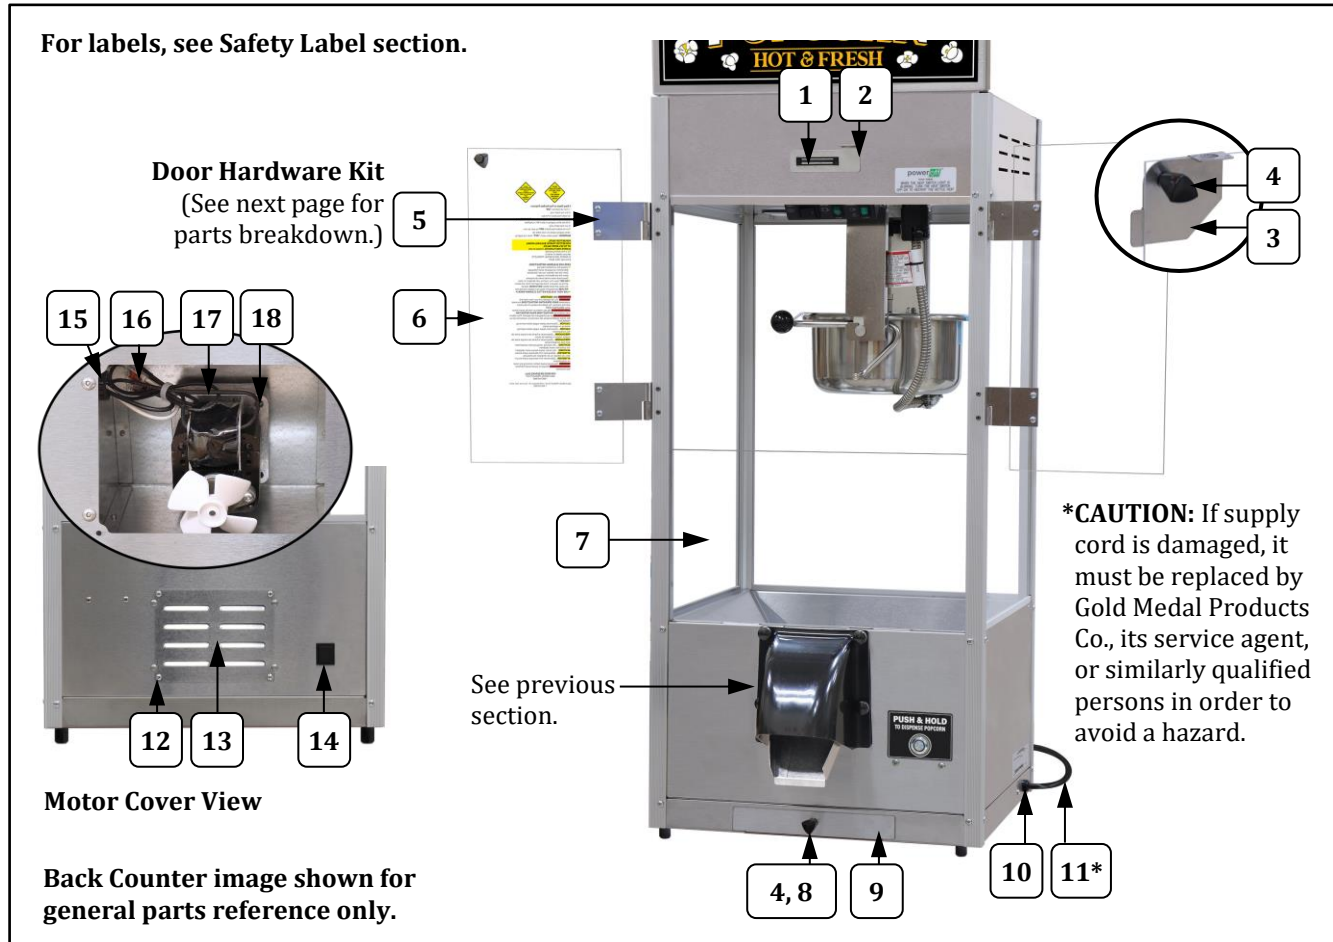

Item	Part Description	Part Number
		All Models
1	MAGNETIC CATCH	47561
2	LOCK BRACKET	114866
3	LOCK BRACKET ASSY (for door)	114867
4	KNOB DOOR	47120
5	DOOR HARDWARE KIT (see next page for breakdown)	61380
6	DOOR PANEL	49395
7	POLYCARBONATE PANEL (clear panel)	114865
8	8-32 X 3/8 PH PAN W/SEMS	42227
9	OLD MAID PAN	116721
10	STRAIN RELIEF SR-6P3-4	76026
11*	POWER SUPPLY CORD, EXPORT	42369
12	SCREW #8-32X3/8 PAN HD PH	74141
13	MOTOR COVER	114132
14	HOLE PLUG, ROCKER SWITCH	42743
15	7/16 CONDUIT BUSHING	77080NM
16	2 POSITION WIRE CONNECTOR	55621
17	DRIVE MOTOR, 230V (drives Coil Assembly)	114882EX
18	10-24 X 3/4 HEX HD	41314




Door Hardware Kit 61380 – Individual Component Breakdown

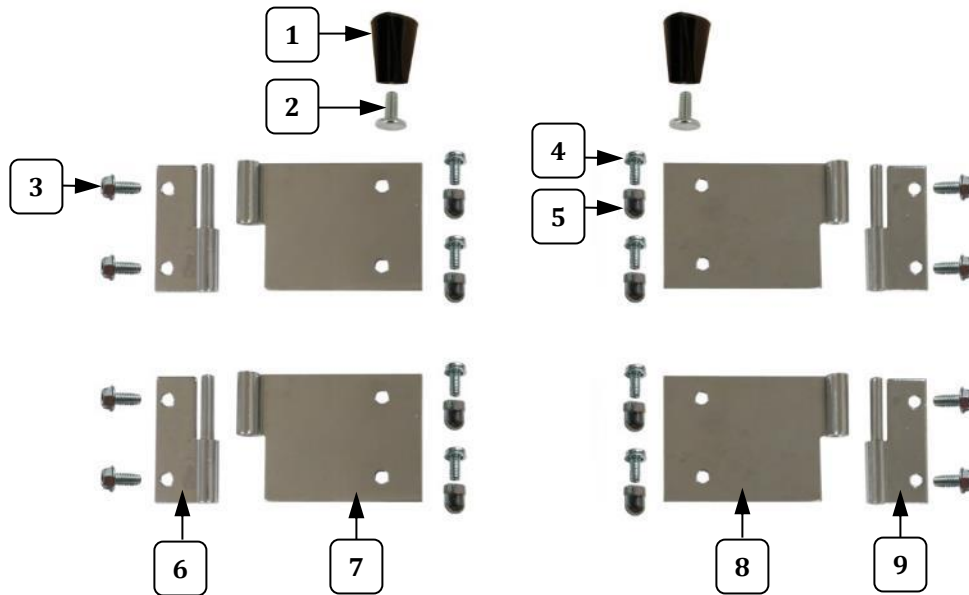

Complete Door Hardware Kit (P/N 61380)
(contains all parts shown above)


Item	Part Description	Part Number
		61380
1	KNOB LID LIFT	47120
2	TEE BOLT	75267
3	8-32 X 5/16 SLOTTED HEX	49594
4	8-32 X 3/8 PH PAN W/SEMS	42227
5	ACORN NUT #8-32	47702
6	MALE HINGE SHORT LEFT	41349
7	FEMALE HINGE LEFT HAND	61359
8	FEMALE HINGE RIGHT HAND	61373
9	MALE HINGE SHORT RIGHT	41350

Cabinet Interior – Hanger Assembly

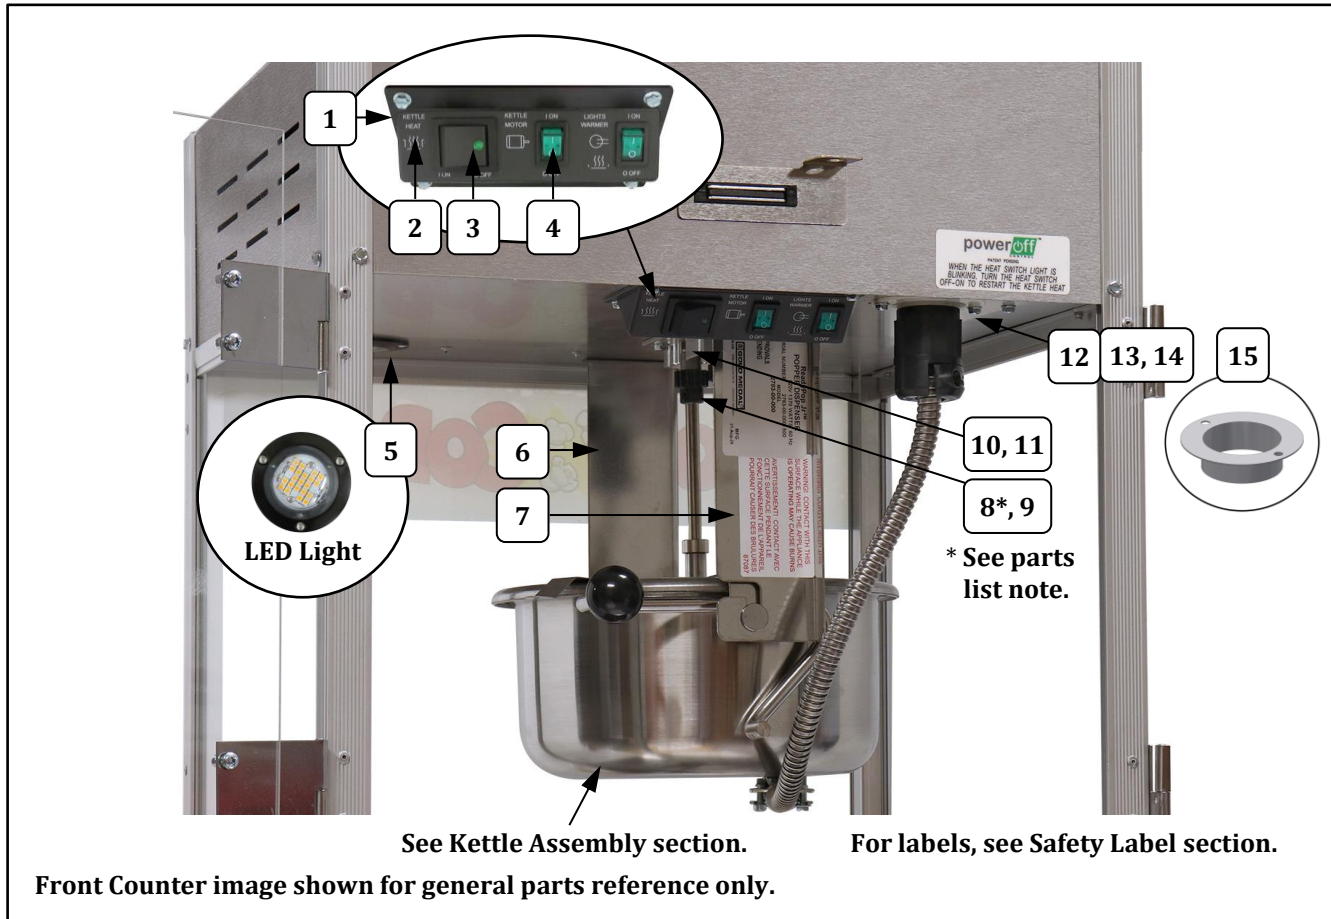

Item	Part Description	Part Number
		All Models
1	SMALL SWITCH BOX	48501
2	SWITCH BOX LABEL	48502
3	GREEN LIGHTED ROCKER SWITCH	42798
4	DPST ROCKER SWITCH	42532
5	LED LIGHT 800 LUMENS	55590
6	REAR HANGER ARM	49009
7	FRONT HANGER ARM	49010
8*	SPUR GEAR KIT (Includes 2 gears with set screws. Always replace Agitator Spur Gear and Kettle Drive Motor Gear as a set.)	47059K
9	10-32" X 3/16" SET SCREW	41742
10	GEAR BLOCK ASSY	67194
11	10-24 X 3/4 HEX HD (fastens Gear Block assembly to Kettle Drive Motor)	41314
12	L6-15R 15A-250V RECEPTACLE (ref. Kettle Bottom Assy. for kettle plug configuration note)	49330EX
13	SCREW #8-32X3/8 PAN HD PH	74141
14	8-32 HEX M/S NUT	74149
15	RECEPTACLE GUARD, PLUG SM	49477


Cabinet Interior – Corn Pans

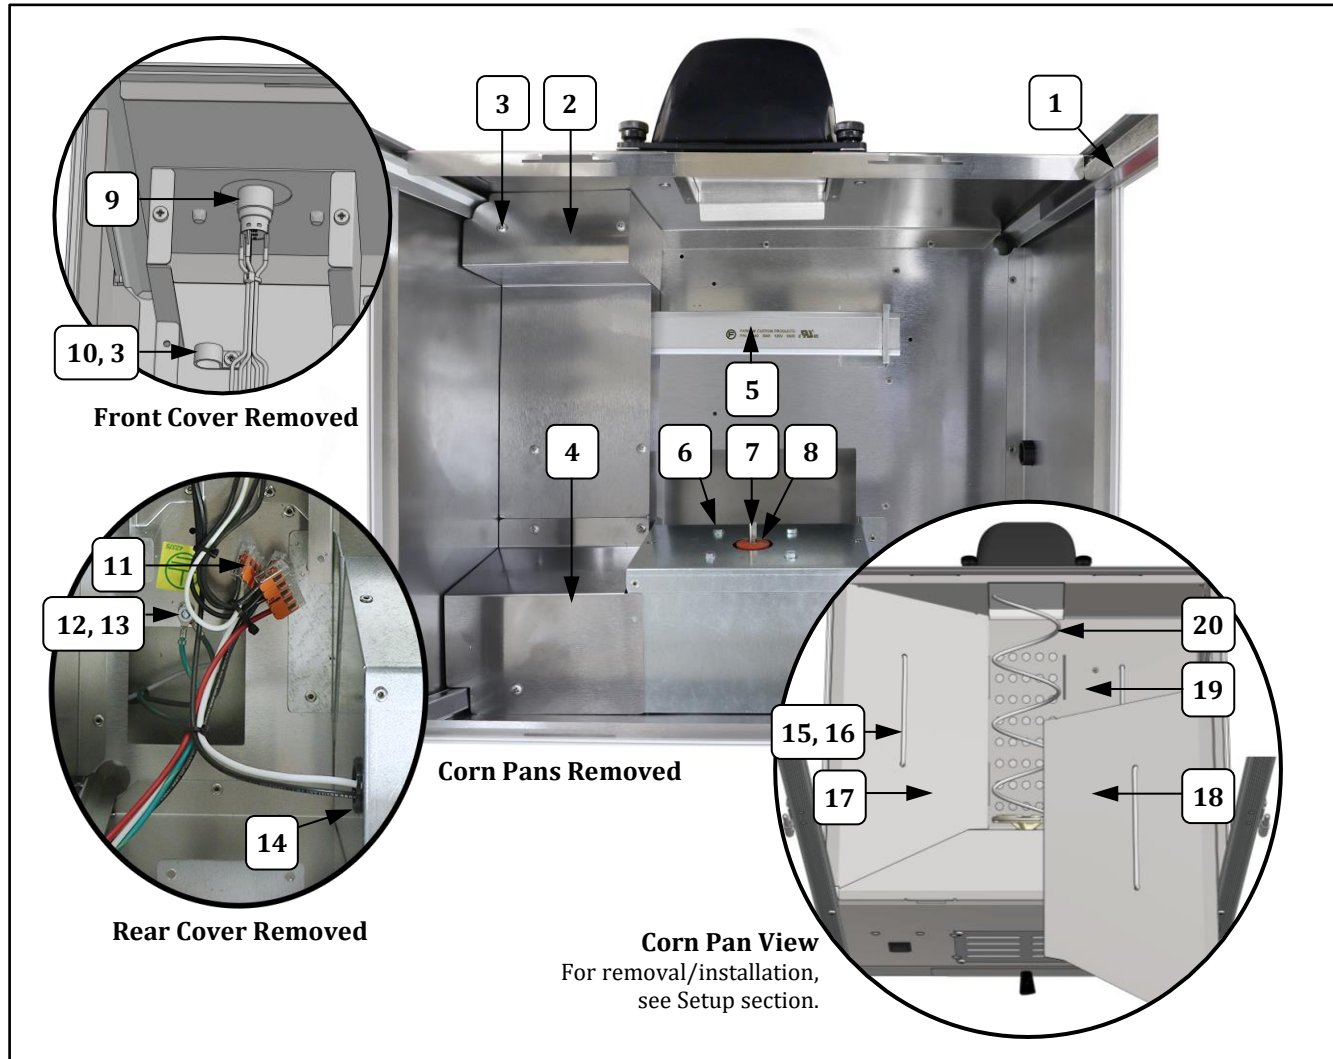

Item	Part Description	Part Number All Models
1	WIRE CHANNEL	114860
2	FRONT COVER	114907
3	SCREW #8-32X3/8 PAN HD PH	74141
4	REAR COVER	114906
5	STRIP HEAT ELEMENT 50W	49442
6	10-24 X 3/4 HEX HD	41314
7	DRIVE MOTOR, 230V	114882EX
8	SILICONE WASHER	114419
9	PUSHBUTTON 24V BLUE RING	114957
10	CABLE CLAMP	87219
11	2 POS WAGO LEVER NUT,12GA	55621
	3 POS WAGO LEVER NUT,12GA	55244
	5 POS WAGO LEVER NUT,12GA	55245

Item	Part Description	Part Number All Models
12	8-32 X 3/8 PH PAN W/SEMS	42227
13	8-32 HEX M/S NUT	74149
14	7/16 CONDUIT BUSHING	77080NM
15	PULL HANDLE	39535
16	HEX NUT #10-32 ESLOK	74549
17	CORN PAN, RH (handle not incl.)	114864
18	CORN PAN, LH (handle not incl.)	114863
19	CORN PAN (handles not incl.)	114857
20	COIL ASSY	114999


Dome Interior – Electrical Components

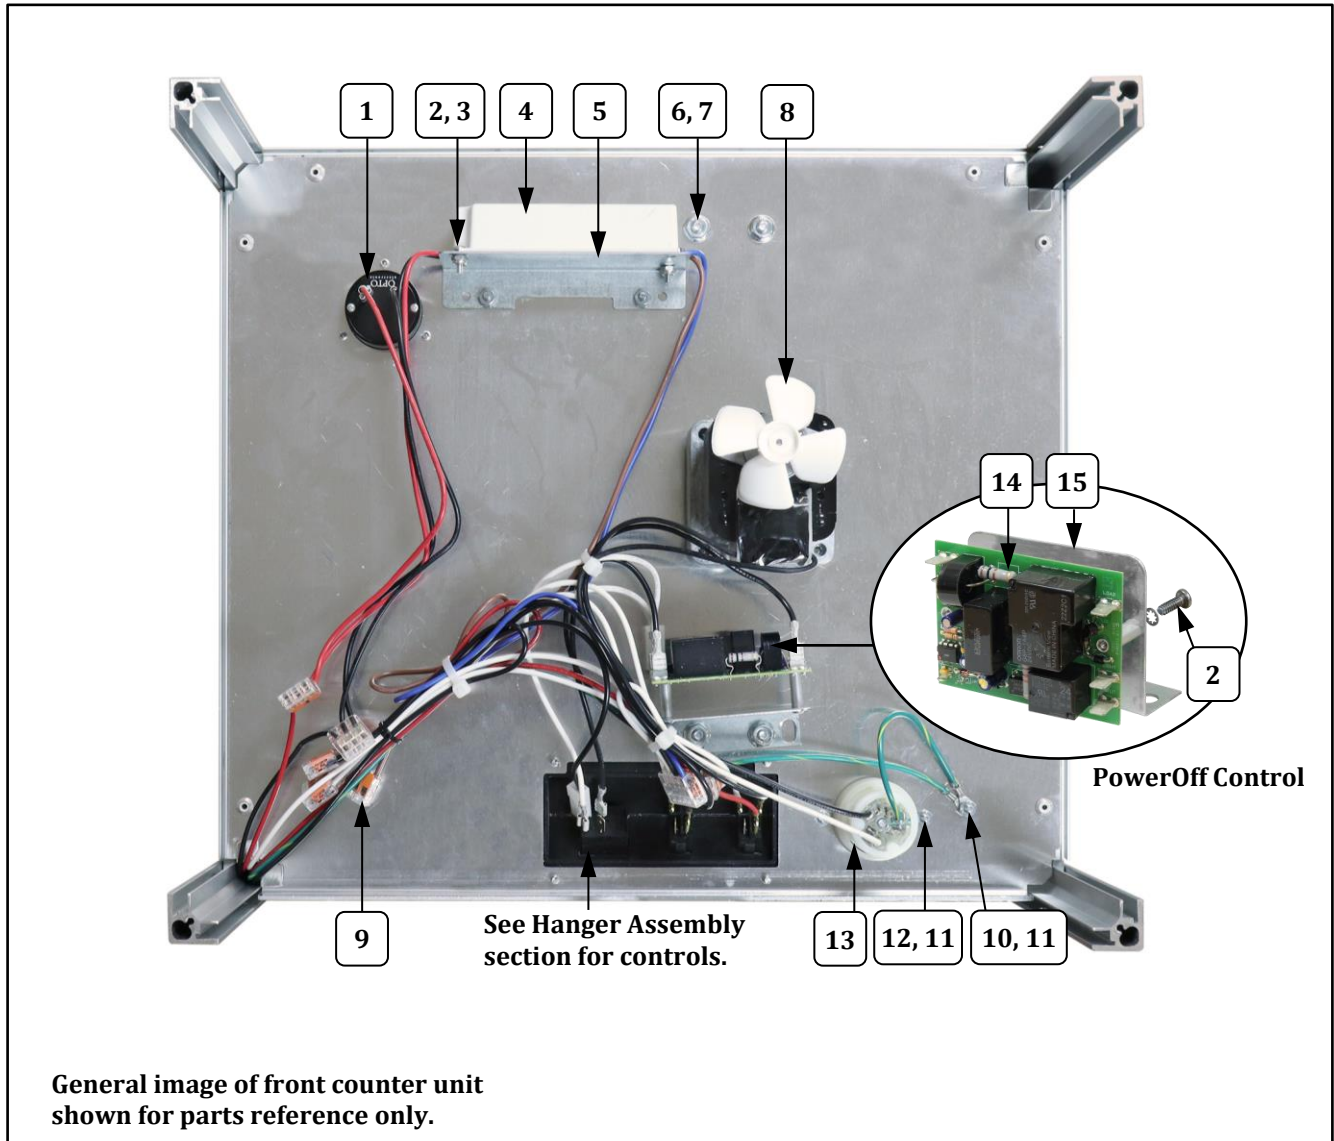


Item	Part Description	Part Number
		All Models
1	LED LIGHT 800 LUMENS	55590
2	6-32 X 3/8 PHIL PAN M/S	39000
3	6-32 GRIP NUT ZINC PLATED	47517
4	POWER SUPPLY 24VDC 20W	55394
5	20W POWER SUPPLY BRACKET	55414
6	1/4-20 X 1/2 HEX HD BOLT	14821
7	1/4-20 SERRATED LOCK NUT	46311
8	KETTLE DRIVE MOTOR, 230V	47067


Item	Part Description	Part Number
		All Models
9	2 POS WAGO LEVER NUT,12GA	55621
	3 POS WAGO LEVER NUT,12GA	55244
	5 POS WAGO LEVER NUT,12GA	55245
10	8-32 X 3/8 PH PAN W/SEMS	42227
11	8-32 HEX M/S NUT	74149
12	SCREW #8-32X3/8 PAN HD PH	74141
13	L6-15R 15A-250V RECEPTACL	49330EX
14	KETTLE POWEROFF CNTRL PCB	55402EX
15	BRACKET, POWEROFF CNTRL	55427


Safety Labels


1 


On units with PowerOff Control feature only.


2 

3 

4 

5 

6 

7 

Unit Labels

Item	Part Description	Part Number
1	LABEL POWEROFF CNTRL	55436
2	UNIVERSAL POPPER DECAL	41019
3	LABEL, DO NOT CLEAN.....	49393
4	MAIN GROUND LABEL	42375
5	WARNING, SURFACE CONTACT	87087
6	CONDUIT WARNING LABEL	82840
7	WARNING LABEL CORD	68720

Accessories

1 

2 

3 

4 


5 

6 

Item	Part Description	Part Number
1	STAMPED ALUMINUM SCOOP	2071
2	6.5 CC MEASURE	47678
3	OIL MEASURE (1/3 CUP)	47150
4	MEASURE ONE CUP	47147
5	Popcorn Decal (front counter)	49158
6	Popcorn Decal (back counter)	115515



Model 2793-01-000 Base

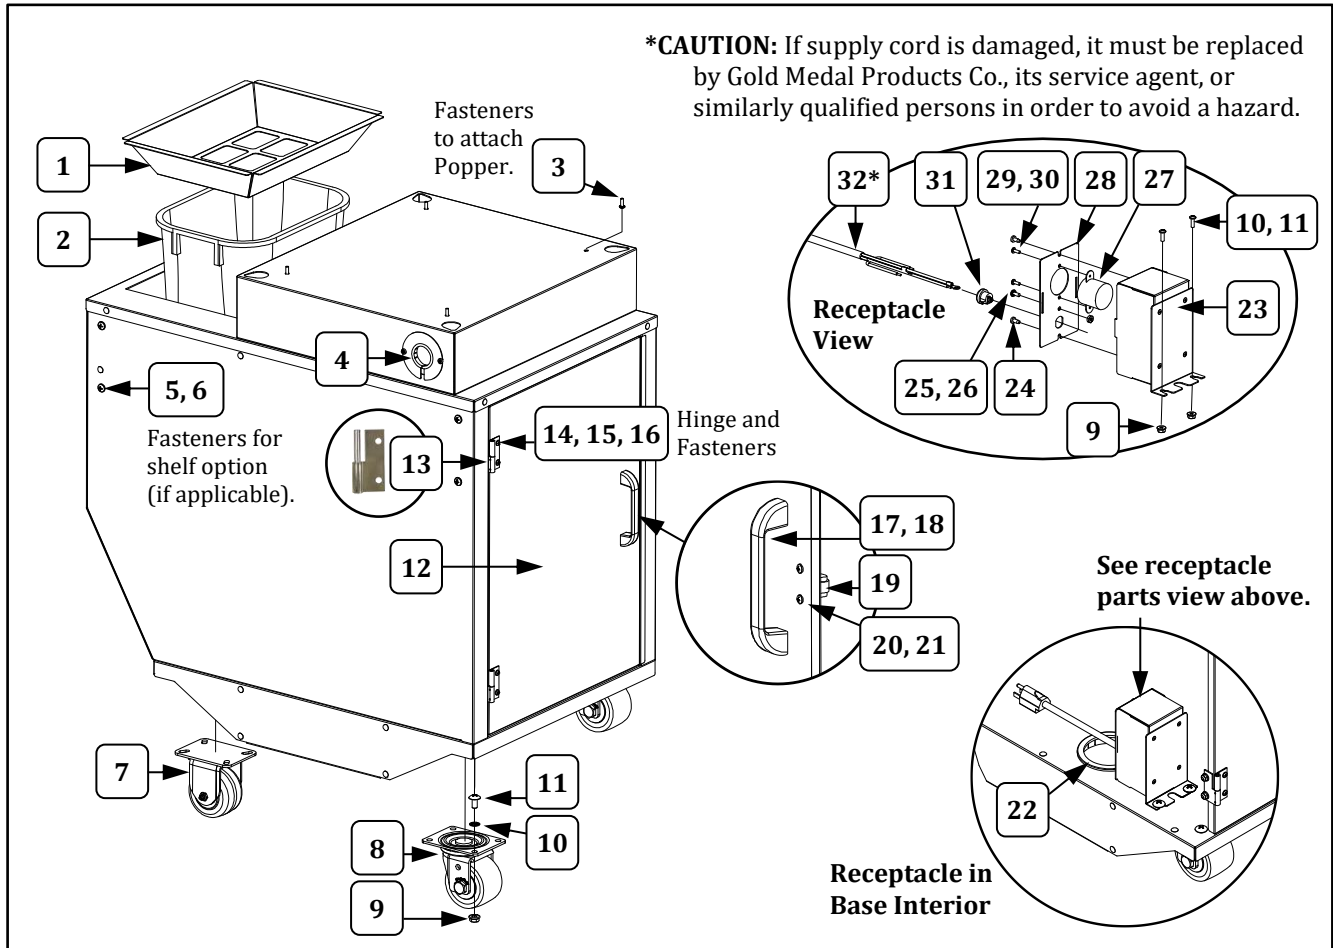

Item	Part Description	Part Number 2793-01-000
1	INSERT	120224
3	WASTE BASKET	37019
3	8-32 X 1/2 PH PAN W/SEMS	47124
4	1.5IN SPLIT SNAP GROMMET	114434
5	1/4-20 X 1/2 P/H PHIL	12471
6	1/4-20 SERRATED LOCK NUT	46311
7	3 IN RIGID CASTER	69962
8	3 IN HD CASTER W/BRAKE	115543
9	5/16-18 SERRATED LOCK NUT	49317
10	WASHER 5/16 INT TOOTH	74137
11	5/16-18 X 5/8 PH TR M/S	46638
12	DOOR	114953
13	MALE HINGE SHORT RIGHT	41350
14	FEMALE HINGE LEFT	41355
15	8-32 X 3/8 PAN HD PH M/S	12389
16	8-32 SERRATED FLANGE NUT	61151
17	DRAWER HANDLE	87420




Item	Part Description	Part Number 2793-01-000
18	10-24 X 1/2 PH TRUSS M/S	42826
19	DOOR CATCH	12045
20	6-32 X 3/8 PHIL PAN M/S	39000
21	6-32 GRIP NUT ZINC PLATED	47517
22	BUSHING, SNAP 3.500 IN	67802
23	RECEPTACLE BOX ASSEMBLY (incls receptacle box and bracket)	114622
24	SCREW #8-32X3/8 PAN HD PH	74141
25	8-32 X 3/8 PH PAN W/SEMS	42227
26	8-32 HEX M/S NUT	74149
27	SCHUKO OUTLET TYPE F	114645
28	RECEPTACLE PLATE	114481-01
29	6-32 X 3/8 PH FL HD M/S	47772
30	6-32 GRIP NUT ZINC PLATED	47517
31	STRAIN RELIEF SR-6P3-4	76026
32*	POWER SUPPLY CORD, EXPORT	42369



Wiring Diagram

Model No. 2783 Series

ITEM	ID	QUANTITY	PART NUMBER	DESCRIPTION
1	ASST1	1	119408	24 VDC 10.12 VDC WIRE ASSY
2	BD1	55402	55402EX	BOILER, AUTO SHUT-OFF
3	CON1-19	55244	55244	SPRING CONNECTOR (3 POS)
4	CON2-39	55245	55245	SPRING CONNECTOR (3 POS)
5	CON40	49330	49330	1.5 A KETTLE PLUG
6	CON41	49329	49329	1.5 A KETTLE PLUG
7	E1	49578	49578	ELEMENT, KETTLE 1125W
8	E2	49440	49442	HEATER, 50W STRIP
9	L1	55590	---	LED PLUCK
10	M1	42038	42057	MOTOR, KETTLE DRIVE
11	M2	11482	11482EX	MOTOR, AUGER
12	PB1	114897	---	PUSH BUTTON, 24VDC
13	PS1	55394	---	24 VDC, 20 W POWER SUPPLY
14	SW1	42798	---	KETTLE HEAT SW
15	SW2	42532	---	KETTLE MOTOR SW
16	SW3	42532	---	LIGHT/MOTOR SW
17	TS1, TS2	76089	---	THERMOSTAT, 450F
18	---	---	---	---

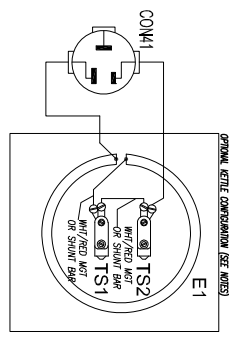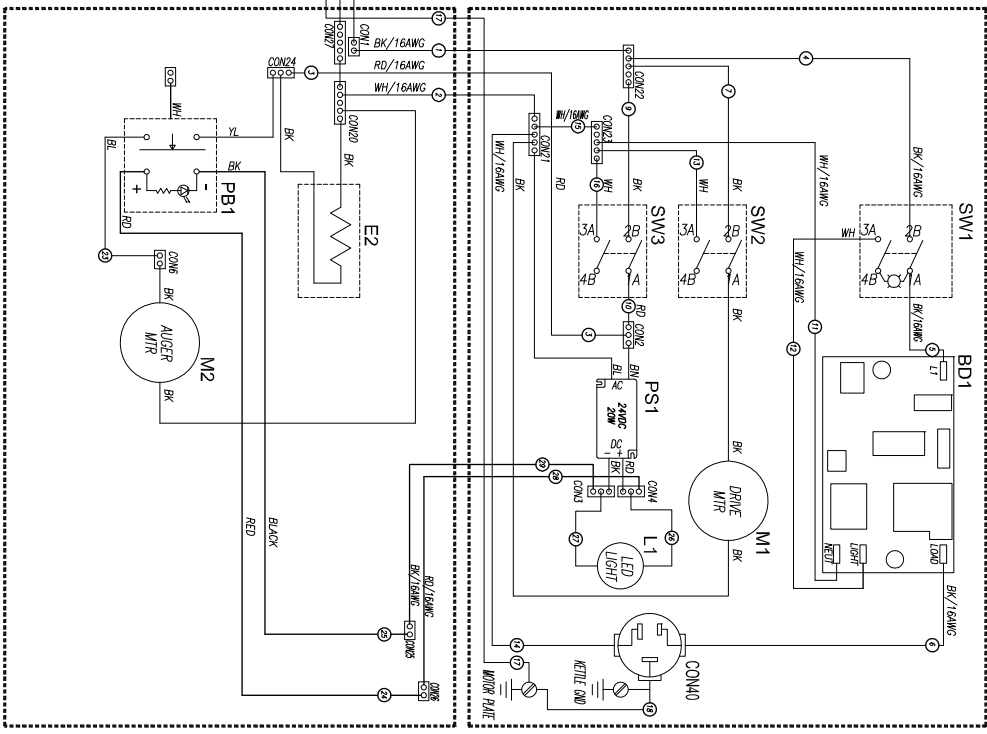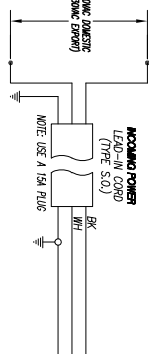

- NOTE:
- 1) NOT ALL MODELS INCLUDE A KETTLE
 - 2) EXPORT VOLTAGE 230VAC/50HZ
 - 3) THE MODEL NUMBERS ARE 2783-XX-07Z WHERE:
- XX - COUNTRY CODE
 - 00 - DOMESTIC
 - 01 - DOMESTIC (EXPORT 230VAC/50HZ)
 - Y - KETTLE OPTION (EXPORT 230VAC/50HZ)
 - 0 - FRONT COUNTER W/ KETTLE
 - 1 - FRONT COUNTER W/O KETTLE
 - 2 - FRONT COUNTER W/O KETTLE
- Z - FEATURE CODE
 - 0 - BASE MODEL
 - 1 - W/NOX CASHLESS SYSTEM AND OSH BOX
 - 2 - W/TOUCHLESS SENSOR
 - 3 - W/NOX CASHLESS SYSTEM
 - 4 - W/NOX CASHLESS SYSTEM AND TOUCHLESS SENSOR
 - 5 - W/NOX CASHLESS SYSTEM AND TOUCHLESS SENSOR AND OSH BOX



WARRANTY

Gold Medal Products Co. warrants to the original purchaser each item of its manufacture to be free of defects in workmanship and material under normal use and service. Gold Medal Products Co.'s obligation under this warranty is limited solely to repairing or replacing parts, f.o.b. Cincinnati, Ohio, which in its judgment are defective in workmanship or material and which are returned, freight prepaid, to its Cincinnati, Ohio factory or other designated point. Except for "Perishable Parts" on specific machines, the above warranty applies for a period of two (2) years from the date of original sale to the original purchaser of equipment when recommended operating instructions and maintenance procedures have been followed. These are packed with the machine. Parts warranty is two (2) years, labor is six (6) months.

THIS WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES EXPRESSED OR IMPLIED, AND OF ALL OTHER OBLIGATIONS OR LIABILITIES ON OUR PART, INCLUDING THE IMPLIED WARRANTY OF MERCHANTABILITY. THERE ARE NO WARRANTIES WHICH EXTEND BEYOND THE DESCRIPTION ON THE FACE HEREOF. **THIS WARRANTY DOES NOT APPLY TO THE EQUIPMENT AND SERVICES RELATED TO THE NAYAX CASHLESS PAYMENT SYSTEM AND GOLD MEDAL EXPRESSLY DISCLAIMS ANY AND ALL WARRANTIES RELATED TO THE SAME.** In no event shall Gold Medal Products Co. be liable for special, incidental or consequential damages. No claim under this warranty will be honored if the equipment covered has been misused, neglected, damaged in transit, or has been tampered with or changed in any way. No claim under this warranty shall be honored in the event that components in the unit at the time of the claim were not supplied or approved by Gold Medal Products Co. This warranty is effective only when electrical items have been properly attached to city utility lines only at proper voltages. This warranty is not transferable without the written consent of Gold Medal Products Co.

The term "Original Purchaser" as used in this warranty shall be deemed to mean that person, firm, association, or corporation who was billed by the GOLD MEDAL PRODUCTS CO., or their authorized distributor for the equipment.

THIS WARRANTY HAS NO EFFECT AND IS VOID UNLESS THE ORIGINAL PURCHASER FIRST CALLS GOLD MEDAL PRODUCTS CO. AT 1-800-543-0862 TO DISCUSS WITH OUR SERVICE REPRESENTATIVE THE EQUIPMENT PROBLEM, AND, IF NECESSARY, FOR INSTRUCTIONS CONCERNING THE REPAIR OR REPLACEMENT OF PARTS.

NOTE: This equipment is manufactured and sold for commercial use only.



GOLD MEDAL PRODUCTS CO.

10700 Medallion Drive, Cincinnati, Ohio 45241-4807 USA

gmpopcorn.com

Phone: (800) 543-0862 Fax: (800) 542-1496
(513) 769-7676 (513) 769-8500