



Instruction Manual

The Show – LED Light Kit


Model No. 2887




GOLD MEDAL® PRODUCTS CO.


10700 Medallion Drive, Cincinnati, Ohio 45241-4807 USA


SAFETY PRECAUTIONS

	⚠ DANGER
	<p>Machine must be properly grounded to prevent electrical shock to personnel. Failure to do so could result in serious injury, or death. Make sure all machine switches are in the OFF position before plugging the equipment into the receptacle. Keep cord and plug off the ground and away from moisture. Always unplug the equipment before cleaning or servicing. DO NOT immerse any part of this equipment in water. DO NOT use a water jet or excessive water when cleaning.</p> <p>008_012221</p>

	⚠ DANGER
	<p>Improper installation, adjustment, alteration, service, or maintenance can cause property damage, injury, or death. Any alterations to this equipment will void the warranty and may cause a dangerous condition. This appliance is not intended to be operated by means of an external timer or separate remote-control system. NEVER make alterations to this equipment. Read the Installation, Operating, and Maintenance Instructions thoroughly before installing, servicing, or operating this equipment.</p> <p>014_020416</p>

	⚠ WARNING
	<p>Read and understand operator's manual and all other safety instructions before using this equipment. To order copies of the operator's manual go to gmpopcorn.com or write to Gold Medal Products Co., 10700 Medallion Drive, Cincinnati, OH 45241 USA 1-(800)-543-0862</p> <p>022_060215</p>

	⚠ WARNING
	<p>DO NOT allow direct contact of this equipment by the public when used in food service locations. Only personnel trained and experienced in the equipment operation may operate this equipment. Carefully read all instructions before operation.</p> <p>012_010914</p>

	⚠ WARNING
	<p>This machine is NOT to be operated by minors.</p> <p>007_010914</p>

- Floss machine must be off unplugged and allowed to cool completely before installing, removing, or making any adjustments to this unit.
- Never make alterations to this equipment. No serviceable parts; no replaceable parts.
- If power supply cord is damaged, do not use the unit.

Note: Improvements are always being made to Gold Medal's equipment. This information may not be the latest available for your purposes. It is critical that you call Gold Medal's Technical Service Department at 1-800-543-0862 for any questions about your machine operations, replacement parts, or any service questions. (Gold Medal Products Co. does not assume any liability for injury due to careless handling and/or reckless operation of this equipment.) General images may be used in manual for reference only.

INSTALLATION INSTRUCTIONS

Inspection of Shipment

After unpacking, check thoroughly for any damage which may have occurred in transit. Claims should be filed immediately with the transportation company. The warranty does not cover damage that occurs in transit, or damage caused by abuse, or consequential damage due to the operation of this machine, since it is beyond our control (reference warranty in back of manual).

Manual

Read and understand the operator's manual and all other safety instructions before using this equipment. To order copies of the operator's manual go to gmpopcorn.com or write to Gold Medal Products Co., 10700 Medallion Drive, Cincinnati, OH 45241 USA 1-(800)-543-0862.

Model Description

The LED Light Kit is an optional accessory (sold separately from floss unit) designed for use with a Gold Medal compact floss machine only (light assembly is powered separately from floss machine).

Items Included with this Unit


LED Light Assembly; DC 12V Power Supply Cord; Instruction Manual/Warranty Registration Card

Installation

1. Floss machine must be turned OFF, unplugged and completely cool to install the LED light assembly.
2. Remove the floss bowl.
3. Place light assembly over floss head—align cutouts on light base with bowl supports.

Cutout for
bowl support.

Bowl Support

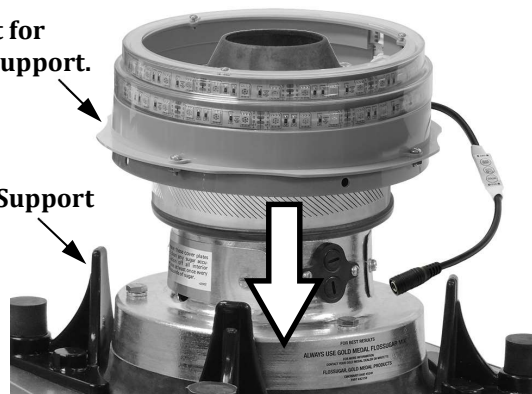


4. Make sure light base is fully seated and level around the bell housing.

Assembly must stay
clear of spinner head.

5. Connect power supply cord.
6. Reinstall the floss bowl.
7. Plug in the light assembly (reference Electrical Requirements section).

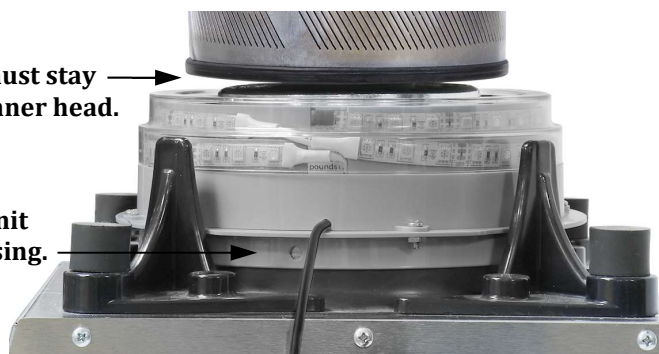

Fully seat unit
on bell housing.



Electrical Requirements

The following power supply must be provided:

120 V~, 24 W, 60 Hz

	 DANGER
	<p>Machine must be properly grounded to prevent electrical shock to personnel. Failure to do so could result in serious injury, or death. Make sure all machine switches are in the OFF position before plugging the equipment into the receptacle. Keep cord and plug off the ground and away from moisture. Always unplug the equipment before cleaning or servicing. DO NOT immerse any part of this equipment in water. DO NOT use a water jet or excessive water when cleaning.</p> <p style="text-align: right;">008_012221</p>

A certified electrician must furnish sufficient power for proper machine operation and install any supplied receptacle (reference unit Data Plate for model specific Volts AC, Hertz, and Wattage requirements). We recommend this equipment be on a dedicated and protected circuit. Failure to wire properly will void the warranty and may result in damage to the machine. It is Gold Medal Products Co.'s recommendation that this machine be plugged directly into a wall outlet. The use of extension cords is not recommended due to safety concerns, and may cause sacrificed and/or reduced performance. Make sure cord is located to prevent a trip hazard or unit upset.

Make sure the removable power cord is fully plugged into the unit before powering up the machine.

Before You Plug In Machine

1. Make sure all machine switches are OFF before plugging equipment into receptacle.
2. Make sure wall outlet can accept the grounded plugs (where applicable) on the power supply cord.
3. The wall outlet must have the proper polarity. If in doubt, have a competent electrician inspect the outlet and correct if necessary.
4. **DO NOT** use a grounded to un-grounded receptacle adapter (where applicable).
5. Install unit in a level position.

Caution: If power supply cord is damaged, do not use the unit.


OPERATING INSTRUCTIONS

Controls and Their Functions

The controller has 3 buttons and remembers the last setting used when powered off.

POWER and SPEED/BRIGHTNESS BUTTON: (four functions)



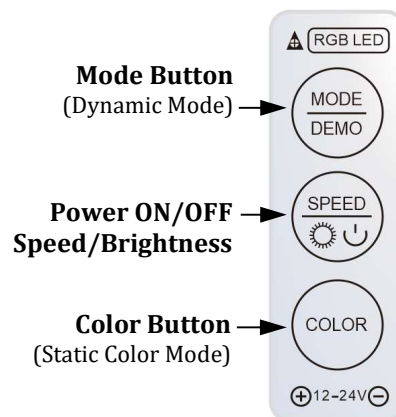


1. **Power ON:** Press button to turn lights ON.
2. **Power OFF:** Press button **longer than 1 sec.** to power OFF (last light setting used is the startup mode).
3. **Speed:** Button controls light flashing speed in dynamic mode (various speeds available).
4. **Brightness:** Button controls color brightness level in static color mode (various levels available).



MODE BUTTON: Selects dynamic color mode (for example: color changing, continuous or intermittent light flashing); each press of button changes selection.


COLOR BUTTON: Selects static color mode (non-blinking); each press of button changes color selection (multiple colors available).

Operating Instructions

1. Press  to turn lighting ON.
2. Set lighting desired—press  to select dynamic color or press  to select a static color.
3. Press  to adjust speed (for dynamic color) or brightness (for static color).
4. To turn OFF, press  **longer than 1 sec.**

Care and Cleaning

	⚠ DANGER
	Machine must be properly grounded to prevent electrical shock to personnel. DO NOT immerse in water. DO NOT clean appliance with a water jet or steam cleaner. Always unplug the equipment before cleaning or servicing. 025_051321

	⚠ WARNING
	To avoid burns, DO NOT touch heated surfaces. DO NOT place or leave objects in contact with heated surfaces. 009_092414

Good sanitation practice demands that all food preparation equipment be cleaned regularly (only use non-toxic, food grade cleaners).

For surfaces needing further cleaning, follow the manufacturer's instructions on any cleaning products used. **DO NOT use oven cleaners or abrasive materials** as they will damage parts of machine. Ammonia cleaners will damage the plastic. Only use a non-ammonia cleaner, such as Gold Medal Watchdog Glass Cleaner (Item No. 2588).

1. Floss machine must be OFF, unplugged and allowed to cool completely before attempting to clean the LED unit.
Reference Instruction Manual for the floss unit for floss machine cleaning instructions.
2. Turn LED light assembly off and unplug it.
3. Remove the floss pan. If needed, remove the light assembly from the floss unit.
4. Wipe LED assembly clean with a soft cloth, SLIGHTLY dampened with warm water, then dry completely.
5. Reinstall unit when clean and dry.



WARRANTY

Gold Medal Products Co. warrants to the original purchaser each item of its manufacture to be free of defects in workmanship and material under normal use and service. Gold Medal Products Co.'s obligation under this warranty is limited solely to repairing or replacing parts, f.o.b. Cincinnati, Ohio, which in its judgment are defective in workmanship or material and which are returned, freight prepaid, to its Cincinnati, Ohio factory or other designated point. Except for "Perishable Parts" on specific machines, the above warranty applies for a period of two (2) years from the date of original sale to the original purchaser of equipment when recommended operating instructions and maintenance procedures have been followed. These are packed with the machine. Parts warranty is two (2) years, labor is six (6) months.

THIS WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES EXPRESSED OR IMPLIED, AND OF ALL OTHER OBLIGATIONS OR LIABILITIES ON OUR PART, INCLUDING THE IMPLIED WARRANTY OF MERCHANTABILITY. THERE ARE NO WARRANTIES WHICH EXTEND BEYOND THE DESCRIPTION ON THE FACE HEREOF. In no event shall Gold Medal Products Co. be liable for special, incidental or consequential damages. No claim under this warranty will be honored if the equipment covered has been misused, neglected, damaged in transit, or has been tampered with or changed in any way. No claim under this warranty shall be honored in the event that components in the unit at the time of the claim were not supplied or approved by Gold Medal Products Co. This warranty is effective only when electrical items have been properly attached to city utility lines only at proper voltages. This warranty is not transferable without the written consent of Gold Medal Products Co.

The term "Original Purchaser" as used in this warranty shall be deemed to mean that person, firm, association, or corporation who was billed by the GOLD MEDAL PRODUCTS CO., or their authorized distributor for the equipment.

THIS WARRANTY HAS NO EFFECT AND IS VOID UNLESS THE ORIGINAL PURCHASER FIRST CALLS GOLD MEDAL PRODUCTS CO. AT 1-800-543-0862 TO DISCUSS WITH OUR SERVICE REPRESENTATIVE THE EQUIPMENT PROBLEM, AND, IF NECESSARY, FOR INSTRUCTIONS CONCERNING THE REPAIR OR REPLACEMENT OF PARTS.

NOTE: This equipment is manufactured and sold for commercial use only.



GOLD MEDAL® PRODUCTS CO.

10700 Medallion Drive, Cincinnati, Ohio 45241-4807 USA

gmpopcorn.com

Phone: (800) 543-0862 Fax: (800) 542-1496
(513) 769-7676 (513) 769-8500